

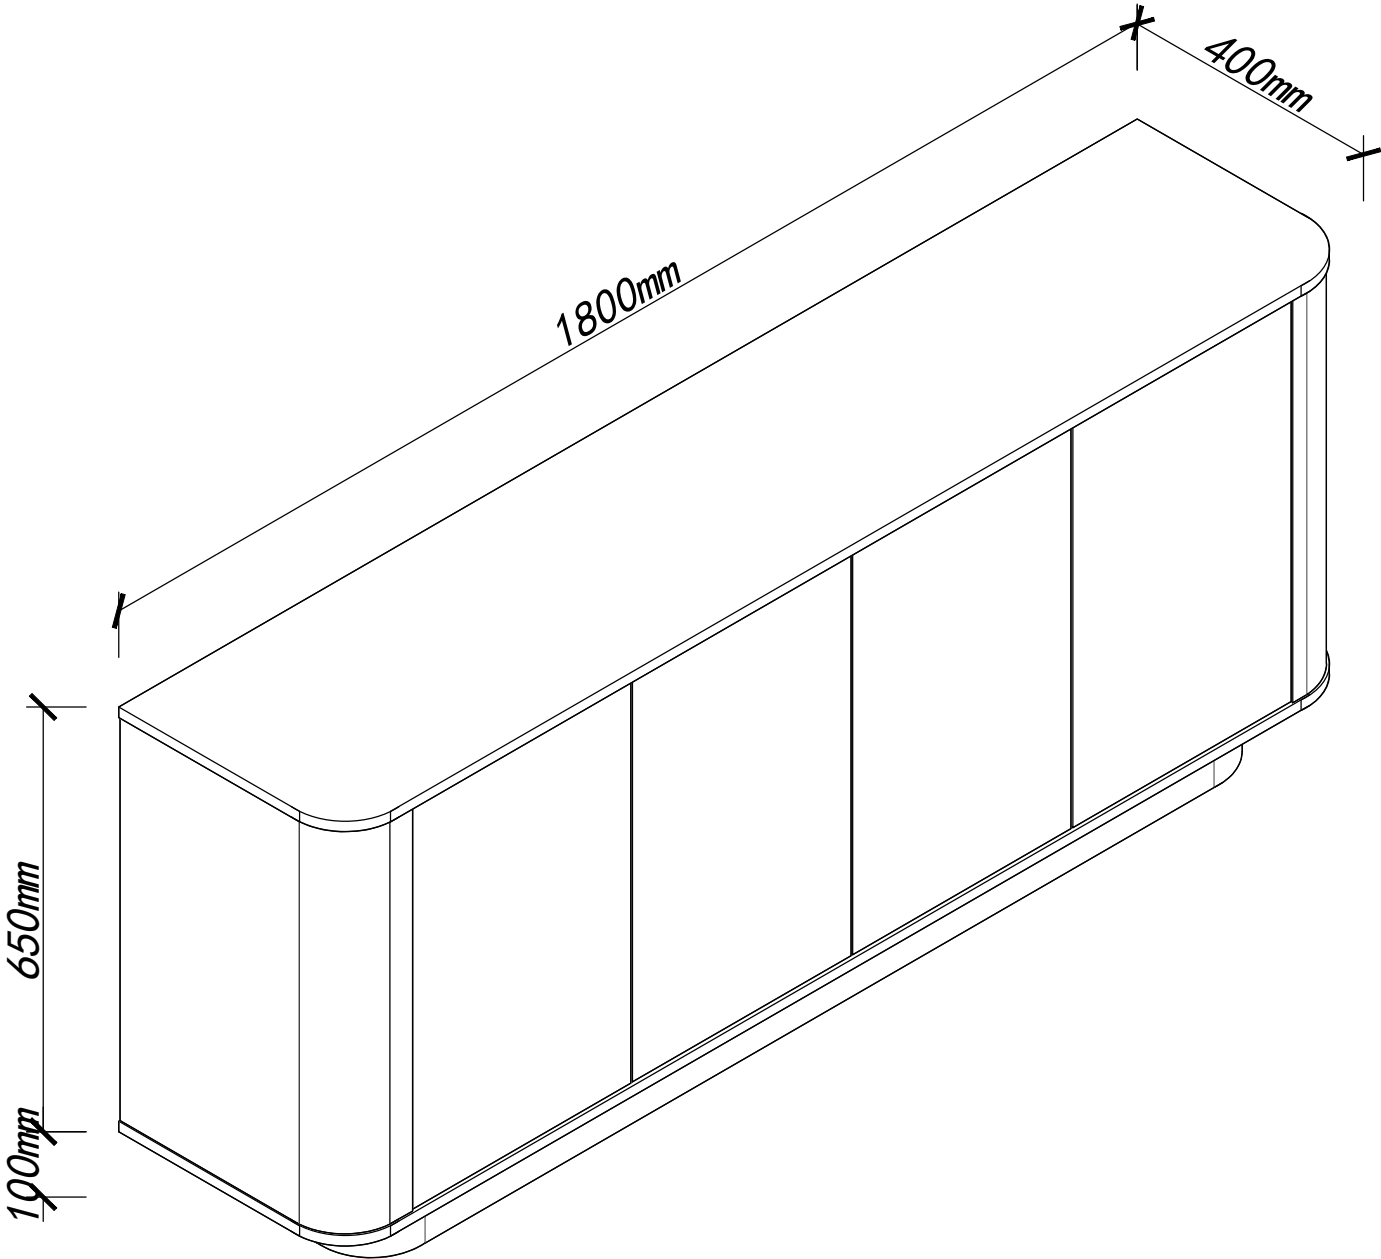
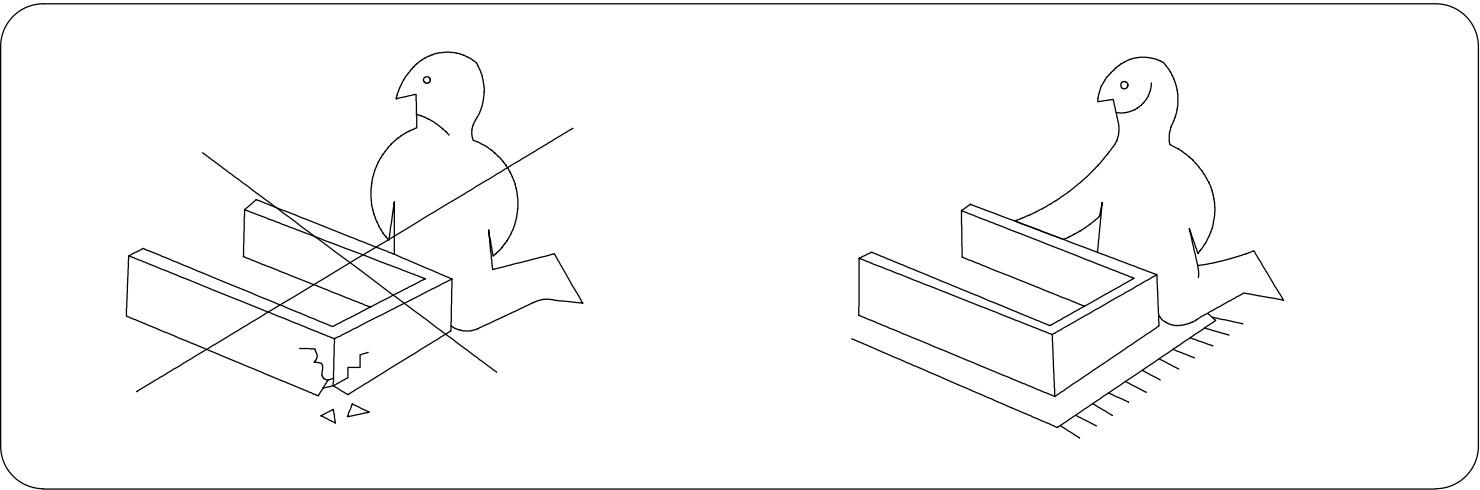
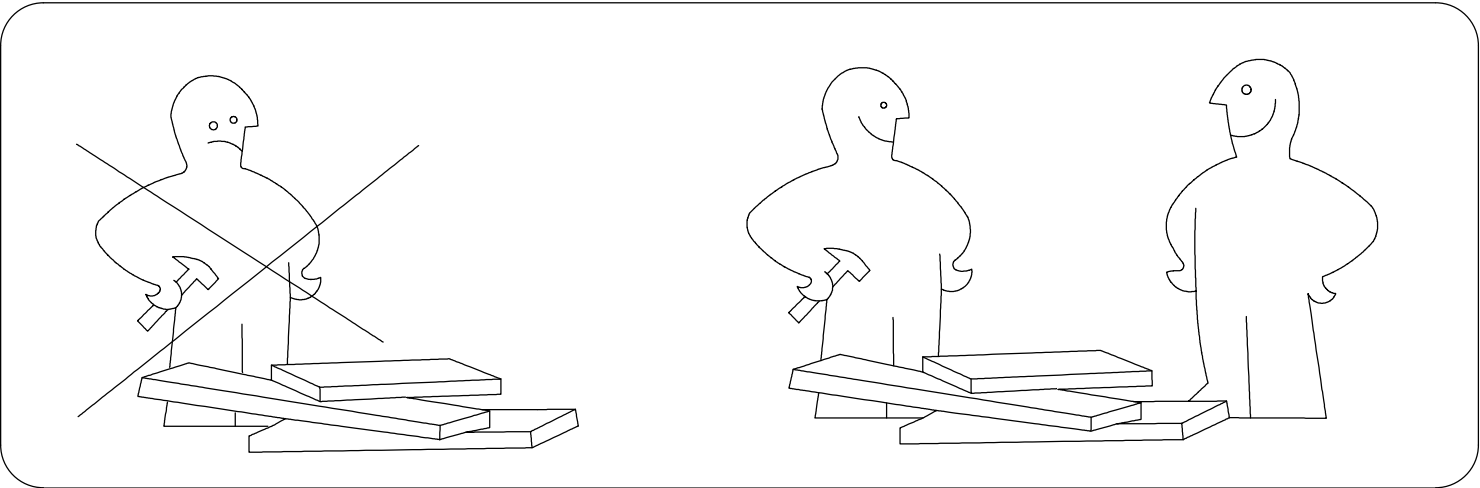
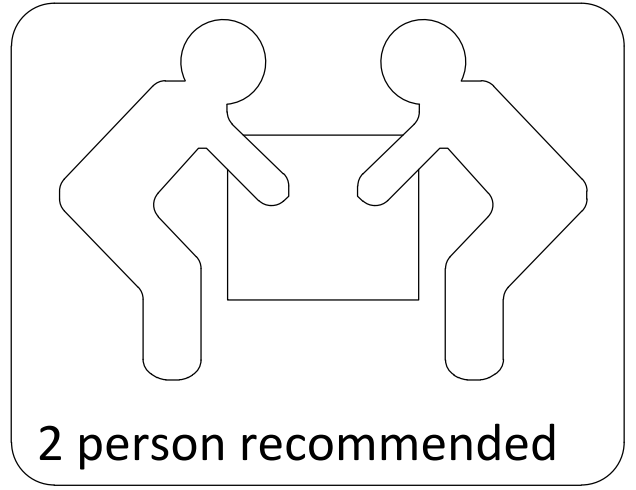



Assembly Instruction
Janni Sideboard 4 doors
209295

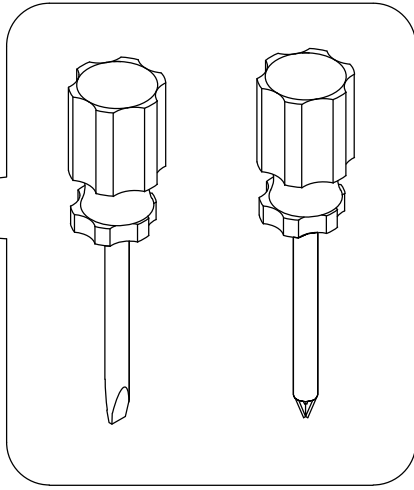

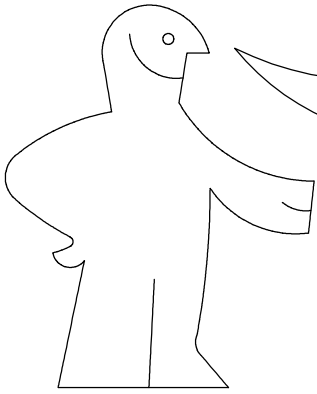

Panel No	Panel Sizes	Quantity
1	1800*400*16	1
2	1800*400*111	1
3	618*396*120	1
4	618*396*120	1
5	618*374*16	2
6	618*374*16	1
7	380*350*16	2

Panel No	Panel Sizes	Quantity
8	369*350*16	2
9	628*391*5	2
10	628*382*5	2
11A/B	612*387*16	3
12	612*387*16	1

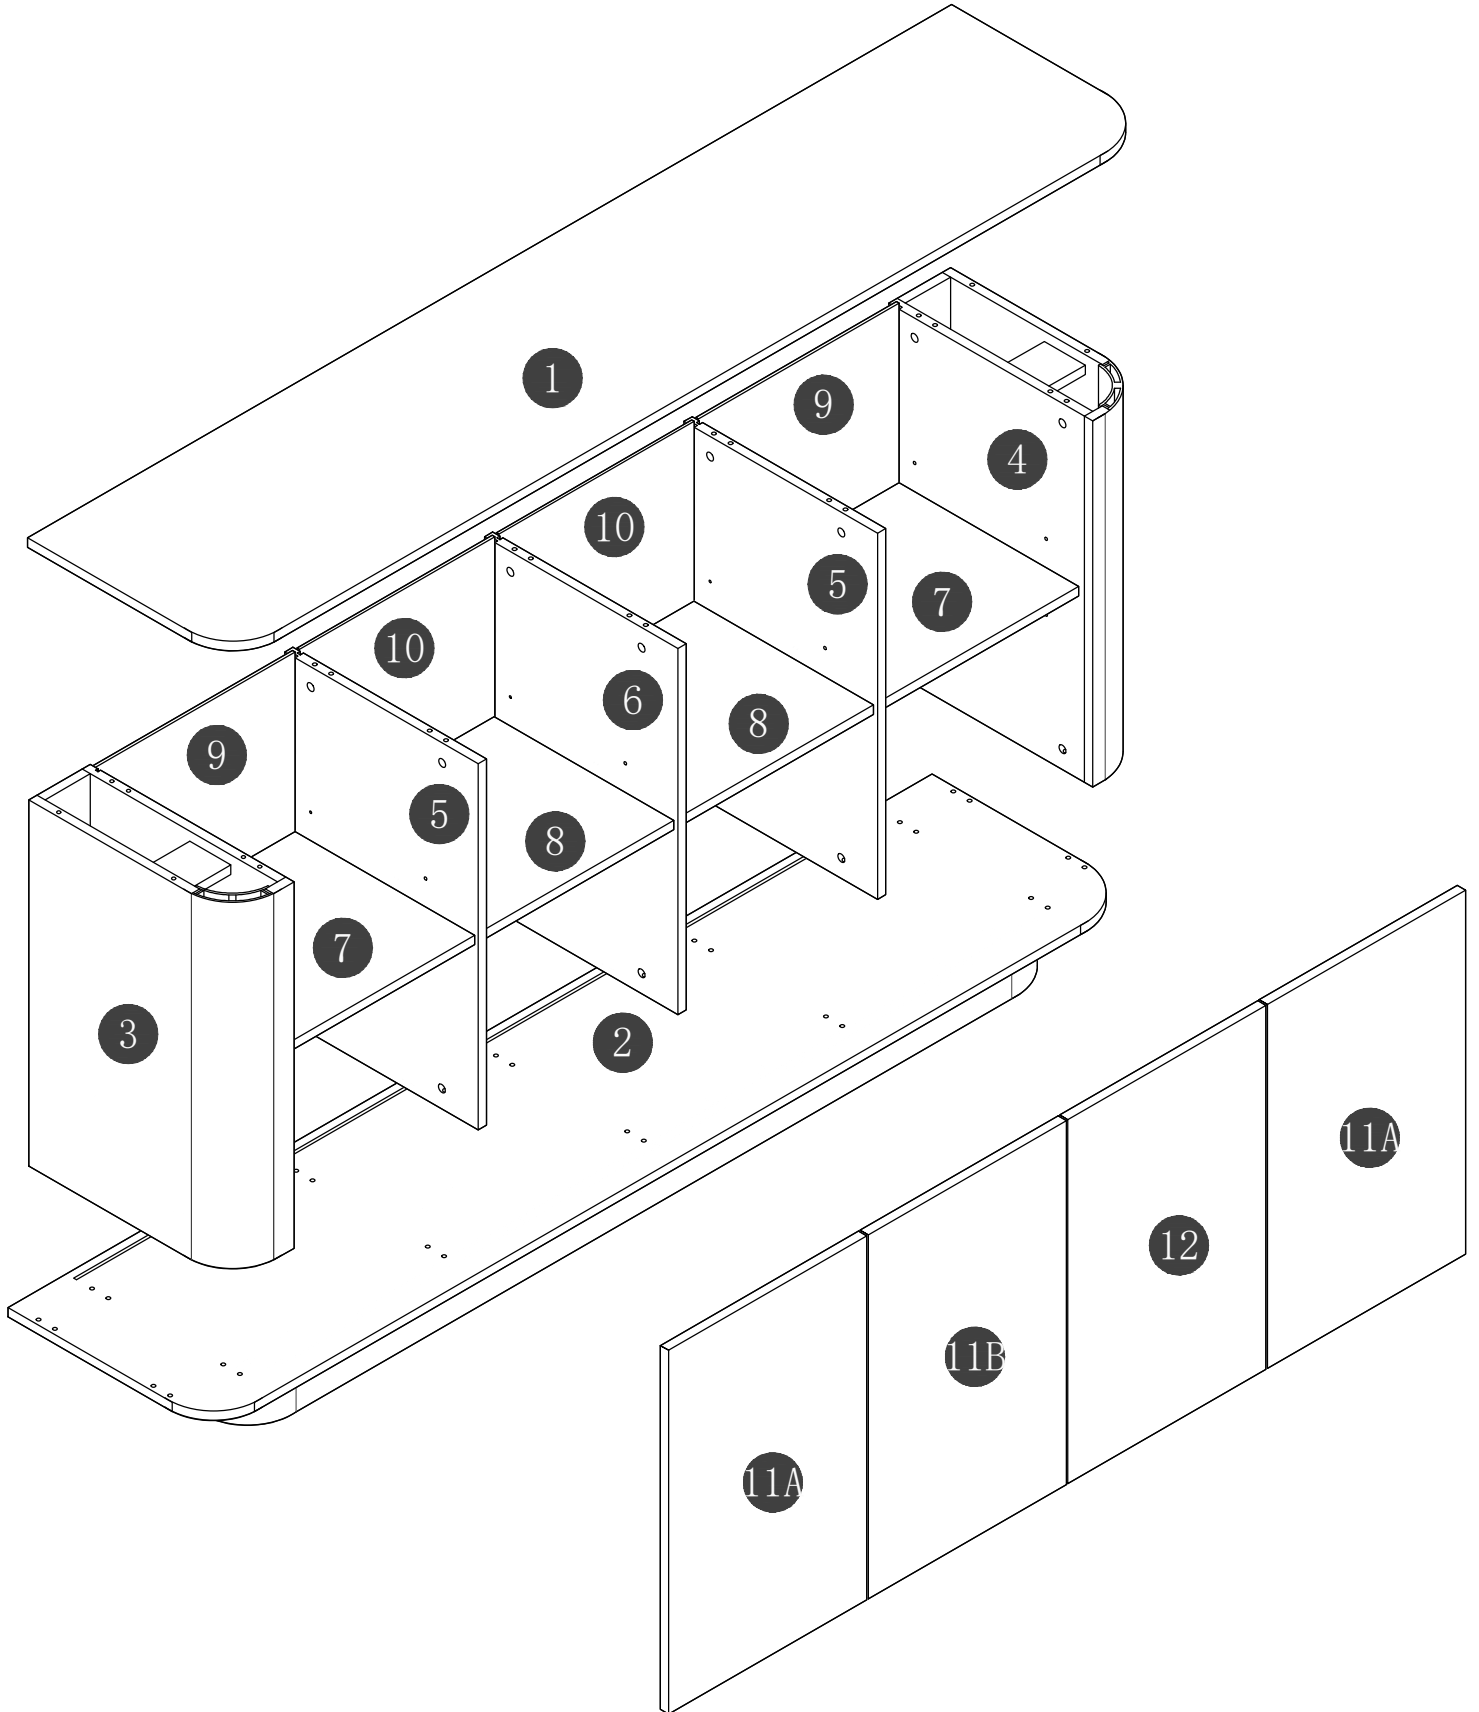


Fittings




M6*40

A=20



Φ 8*30

B=28

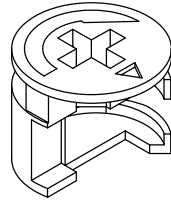


Φ 15*12

C=20




Φ 21


D=20

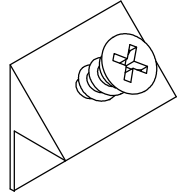


E=16

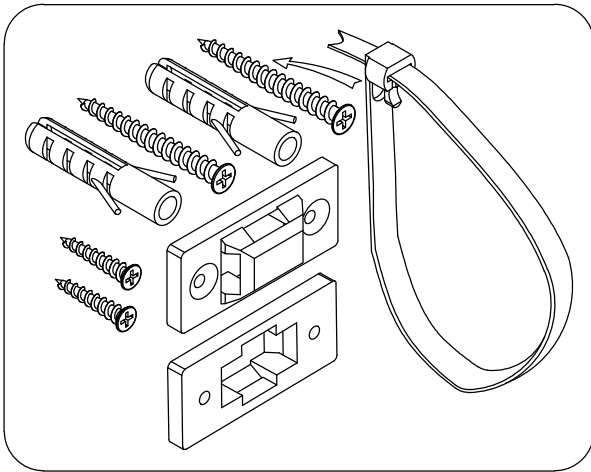


F=1

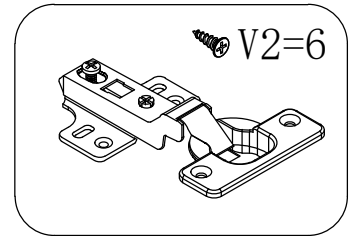


I2=4

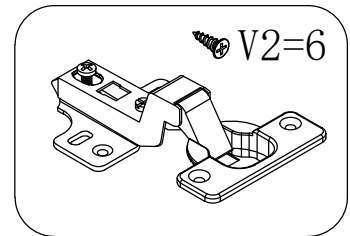

I3=4

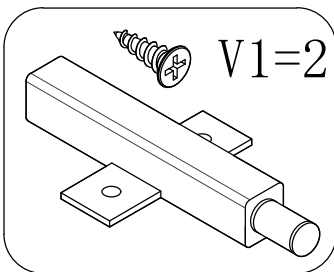


K=4

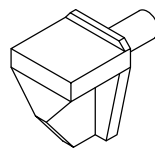


L=16


STEP 1

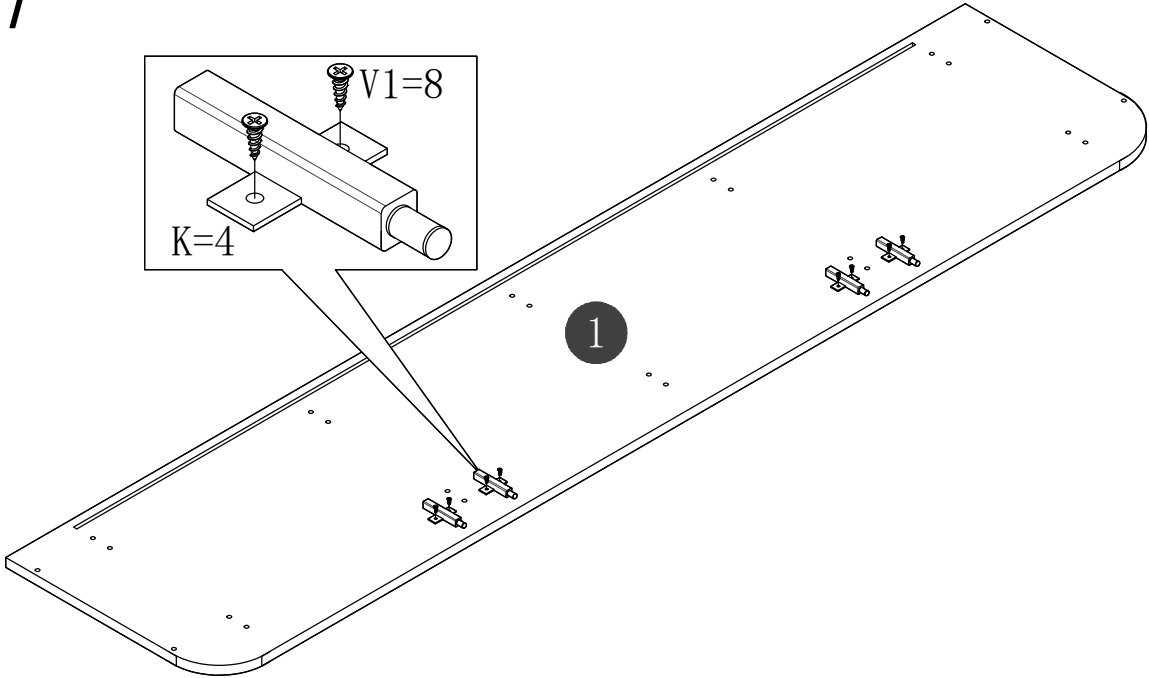


STEP 2

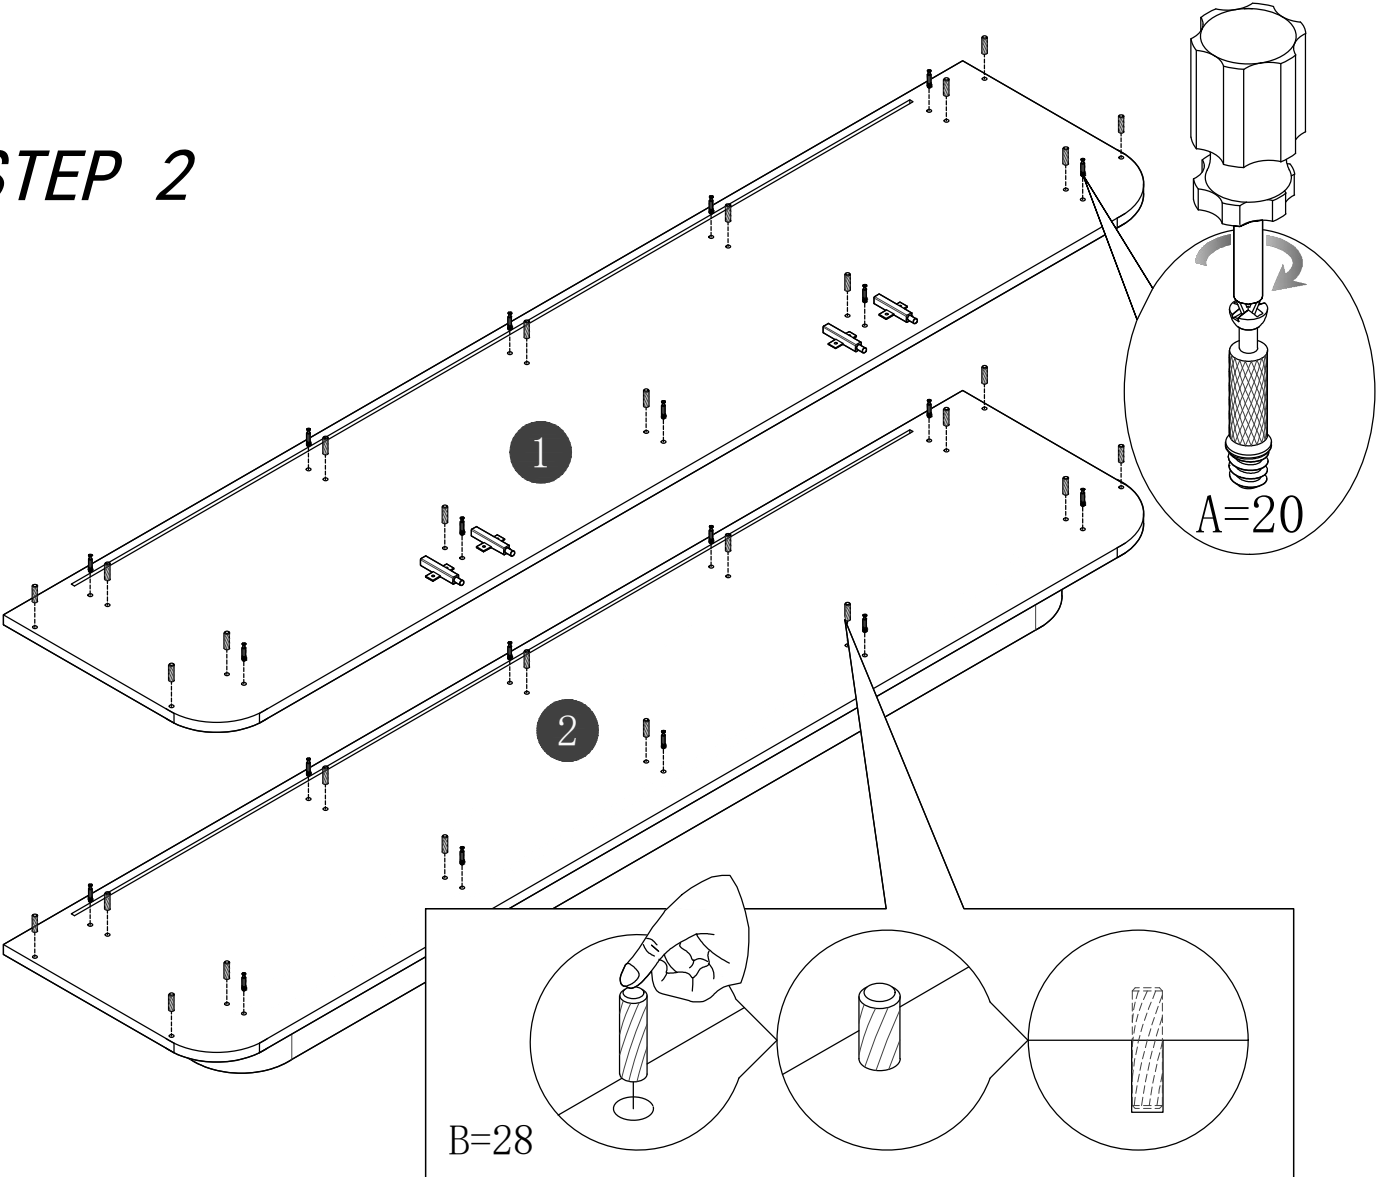


STEP 3

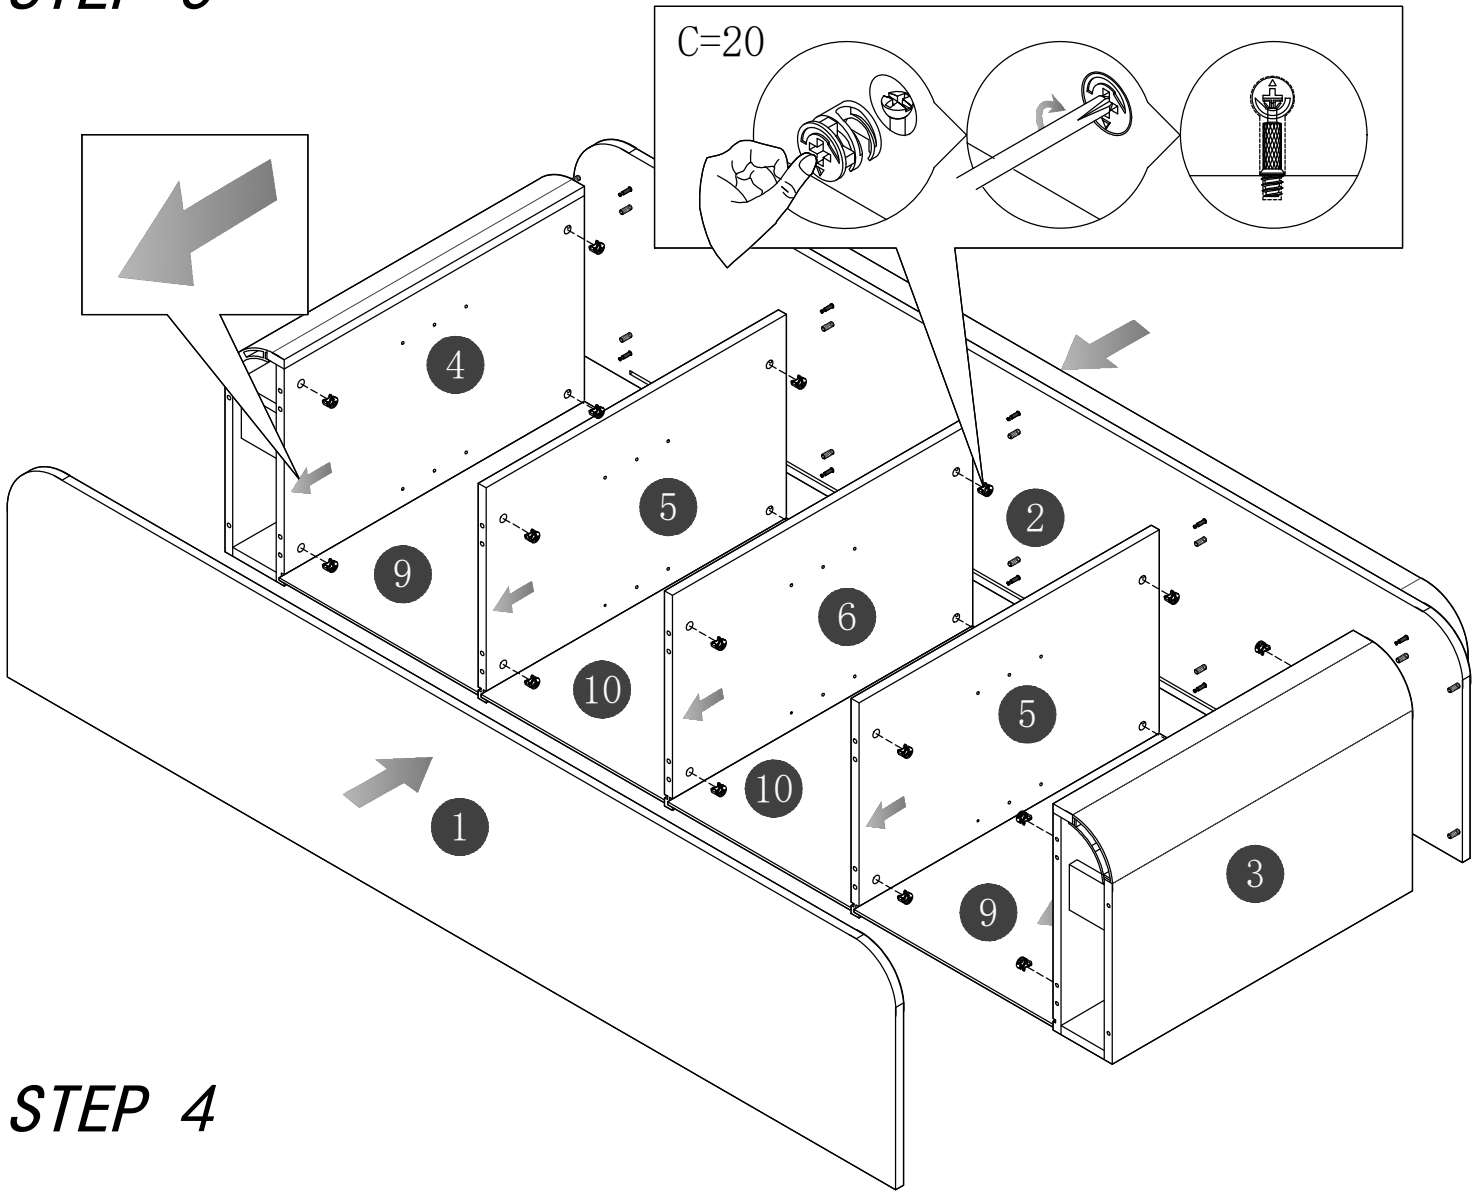


STEP 4

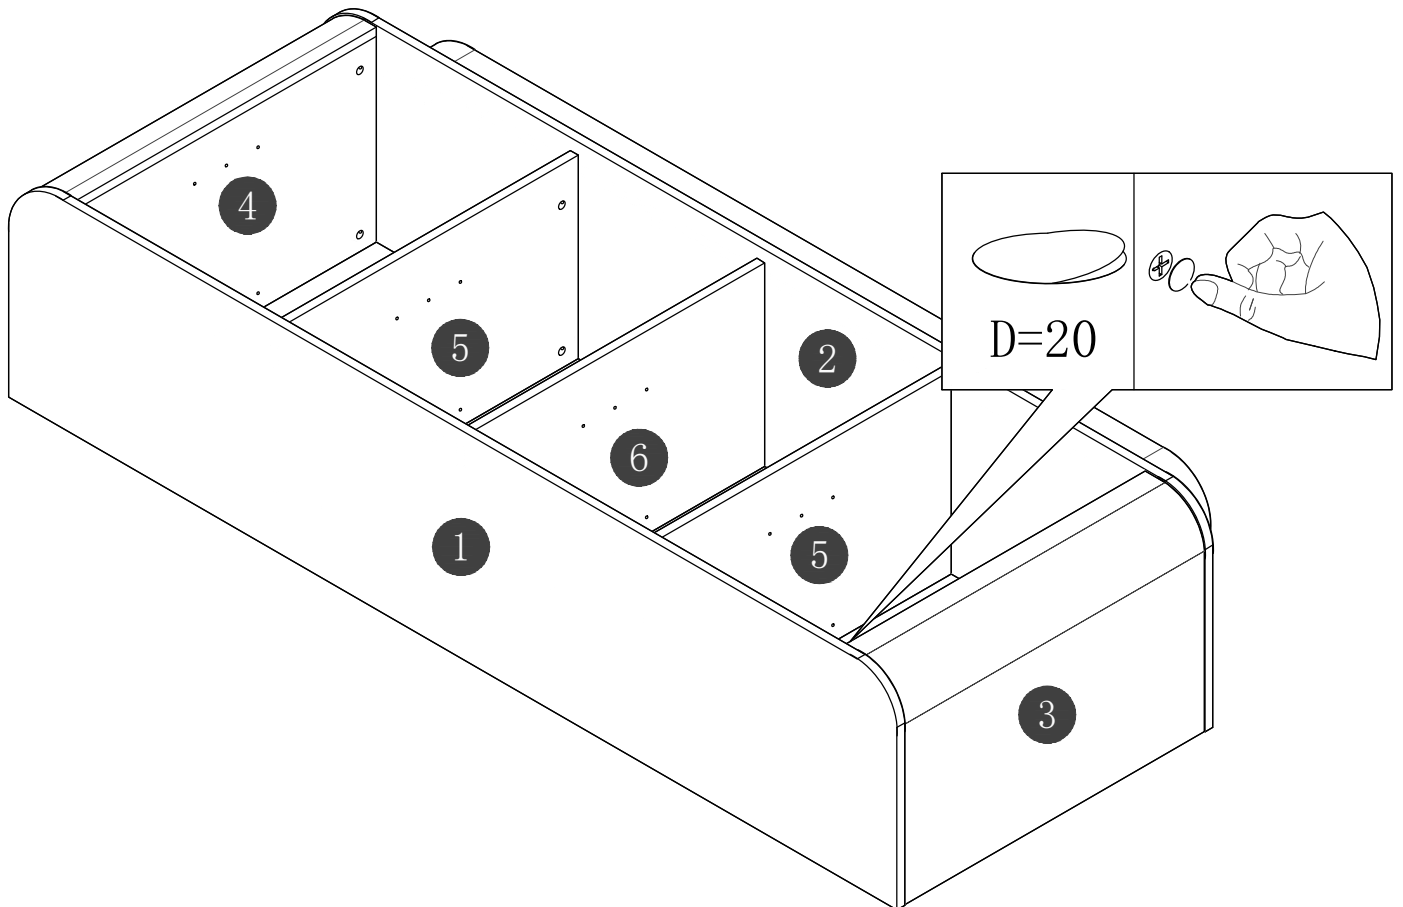


STEP 5

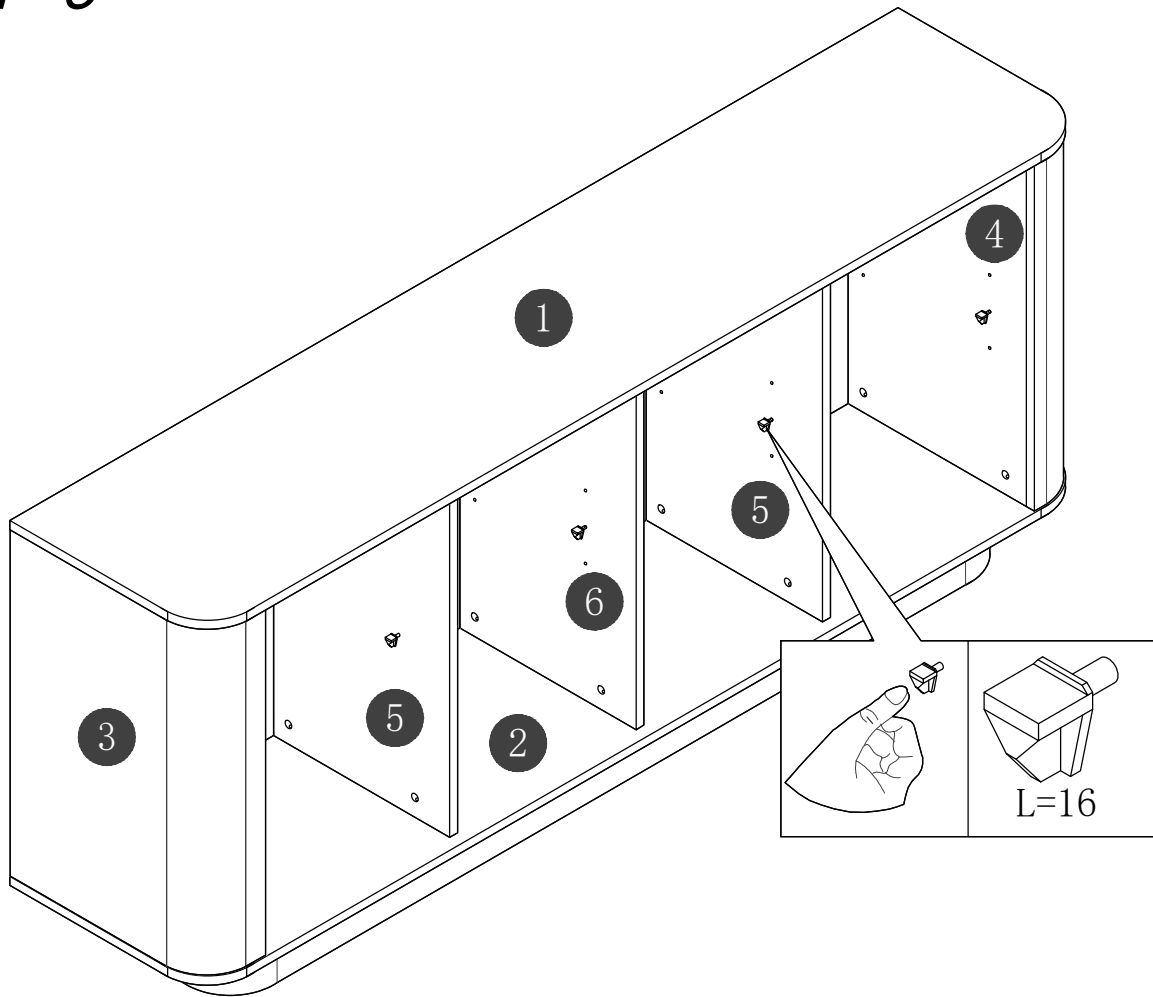


STEP 6

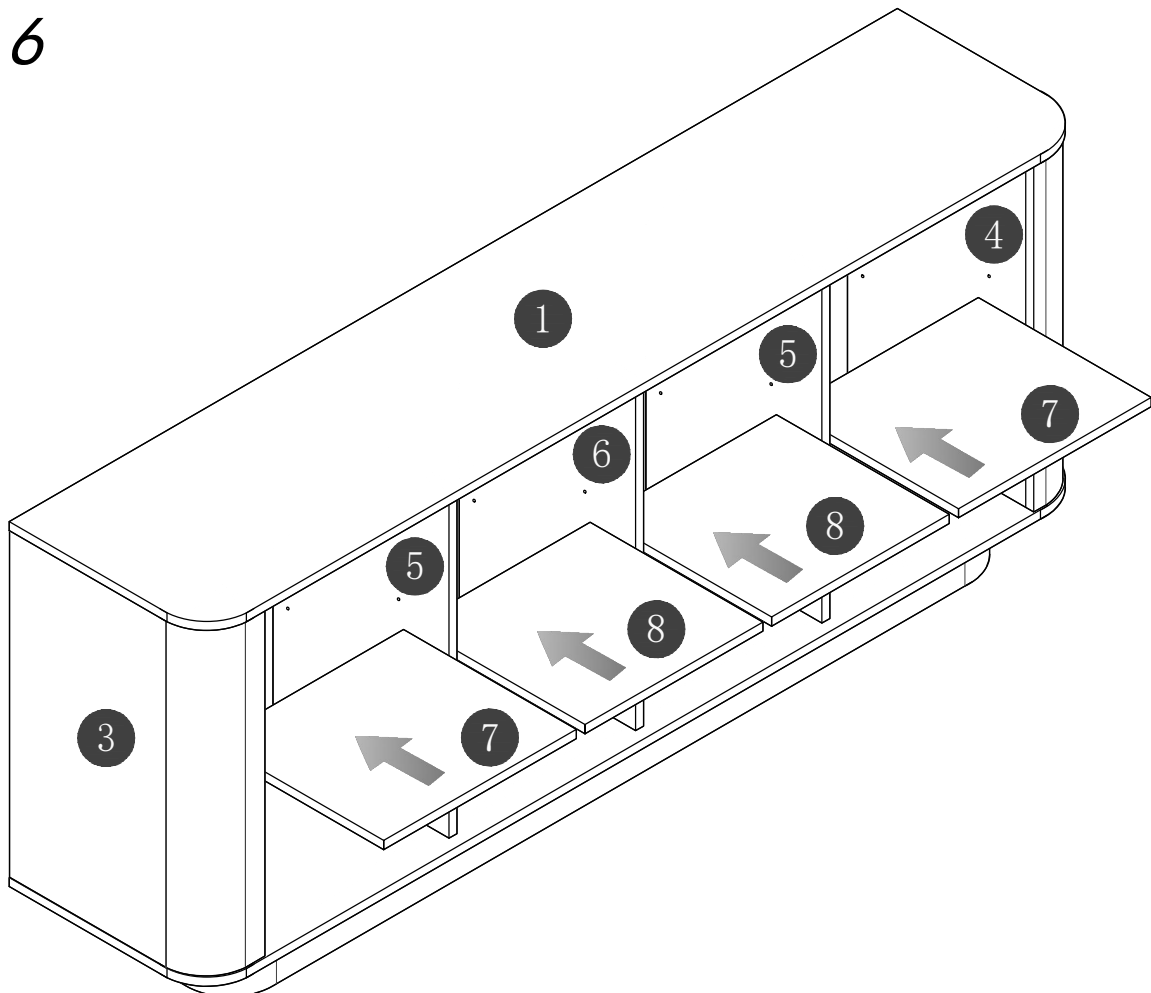




STEP 7

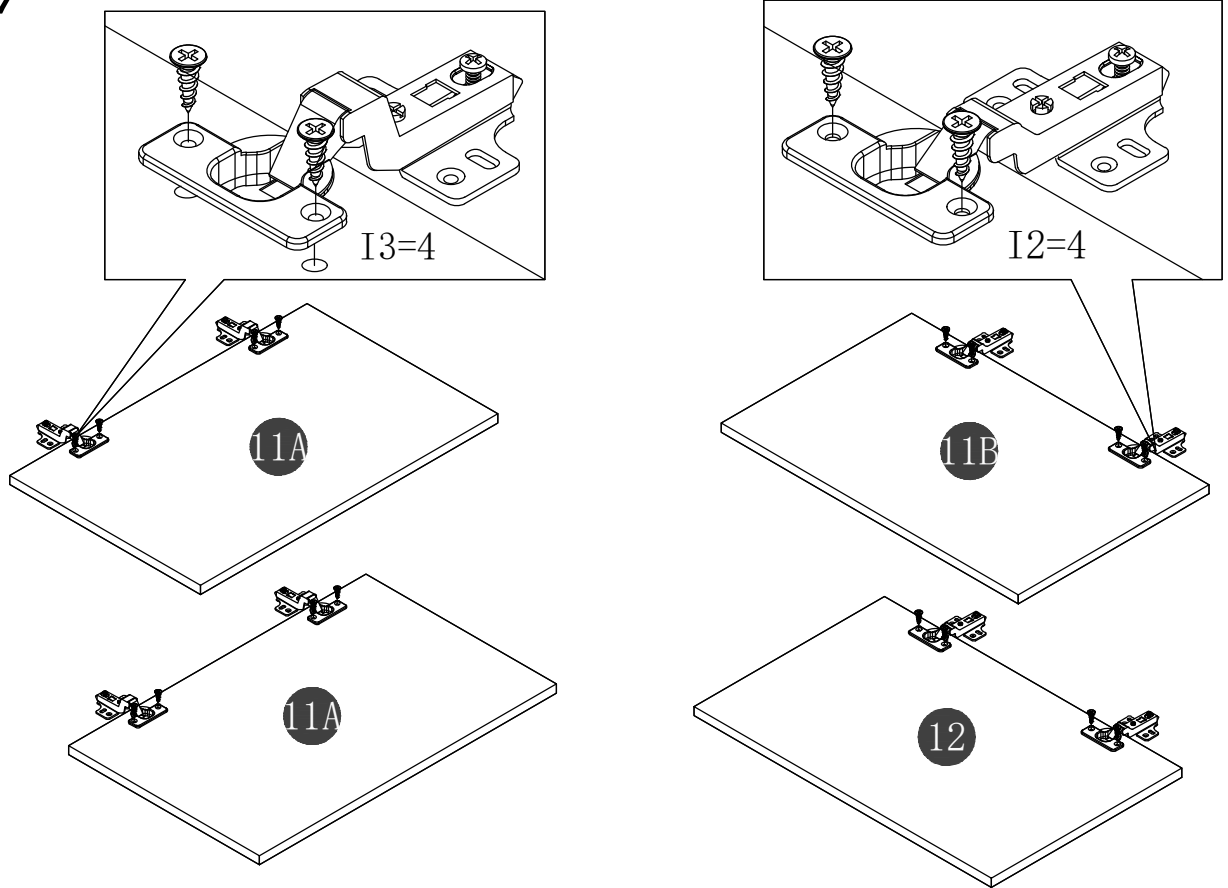


STEP 8

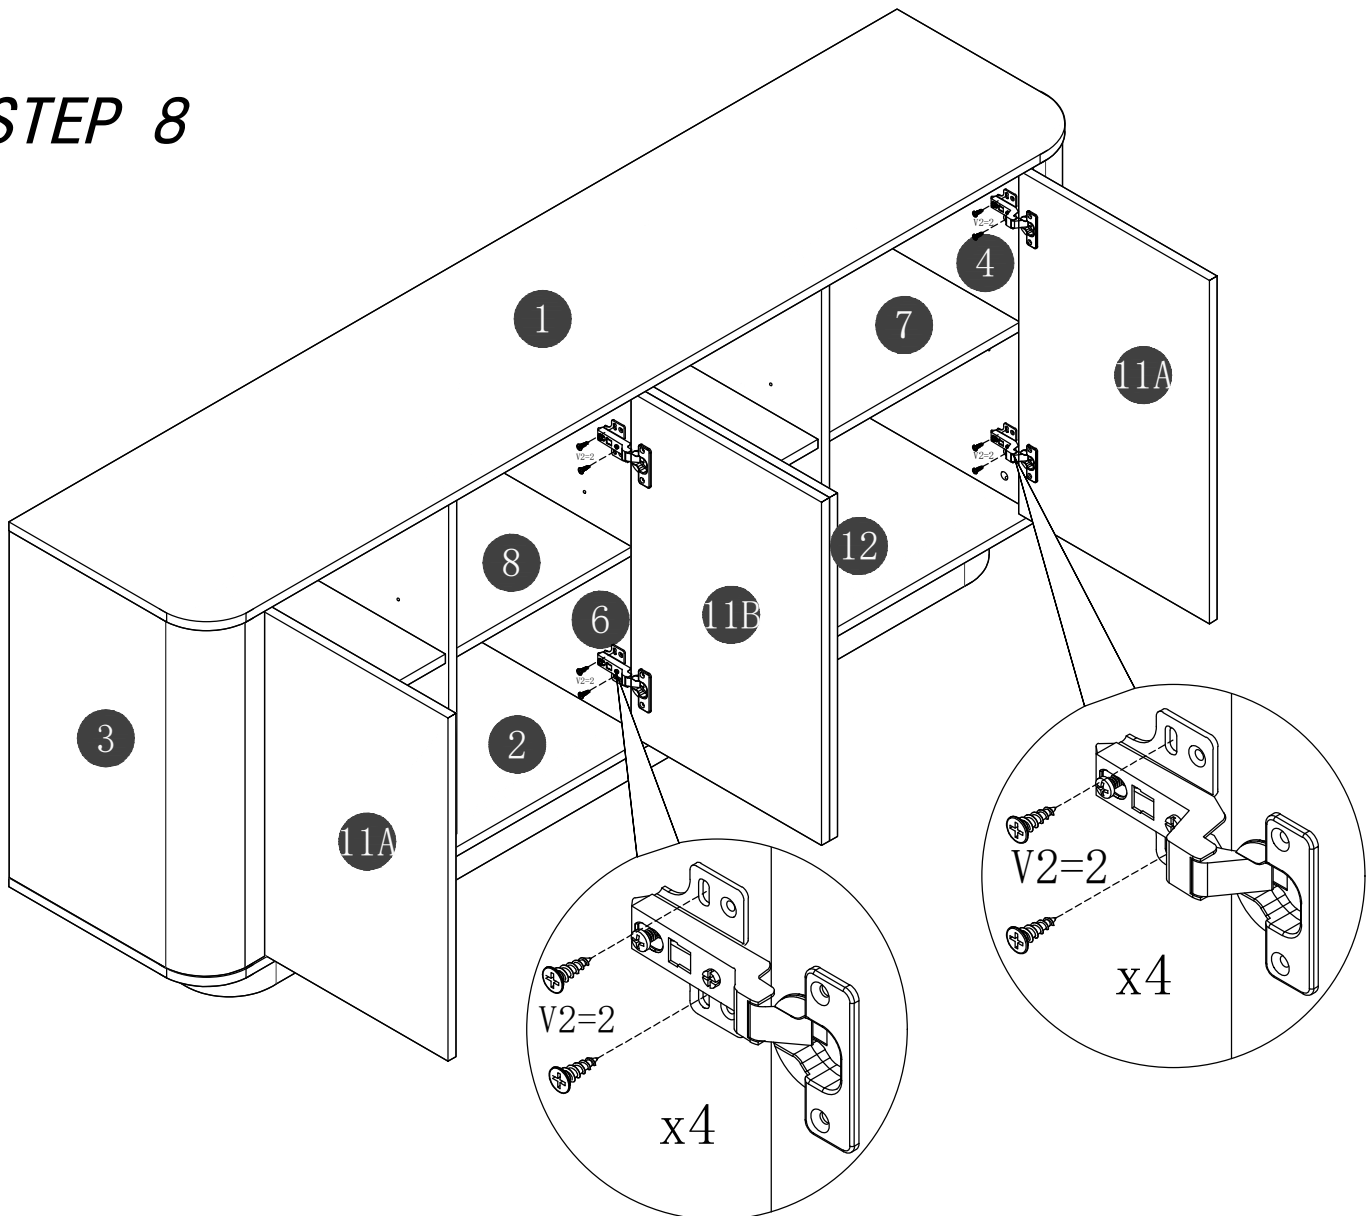


STEP 9

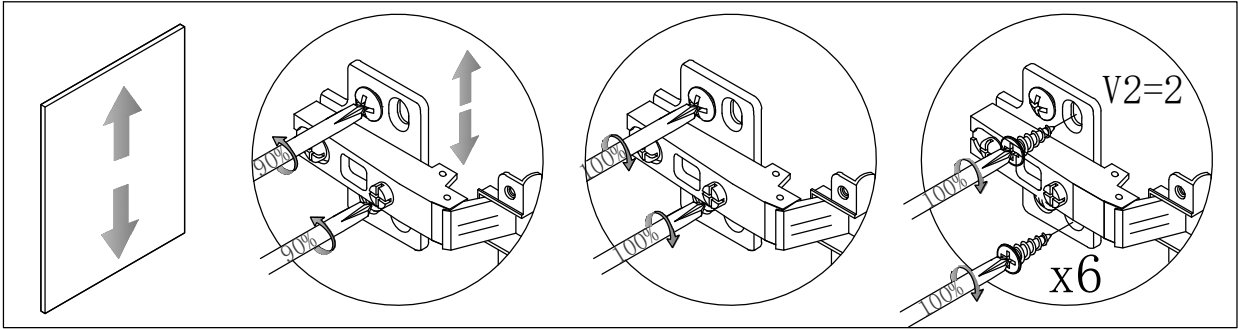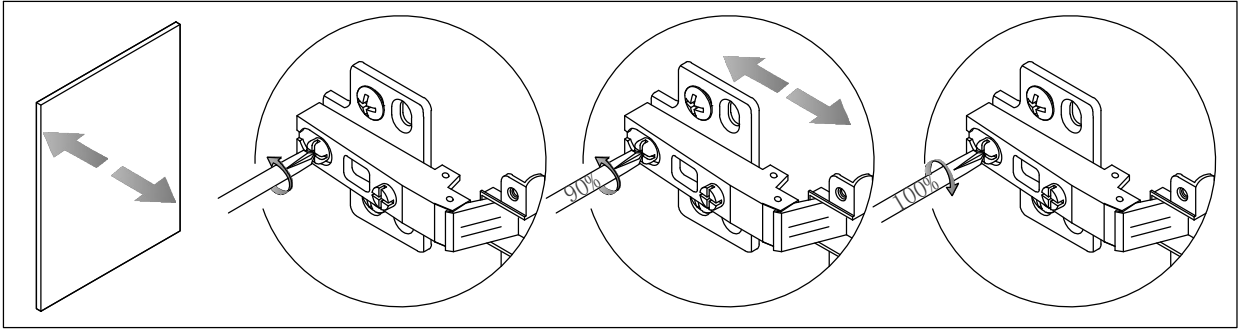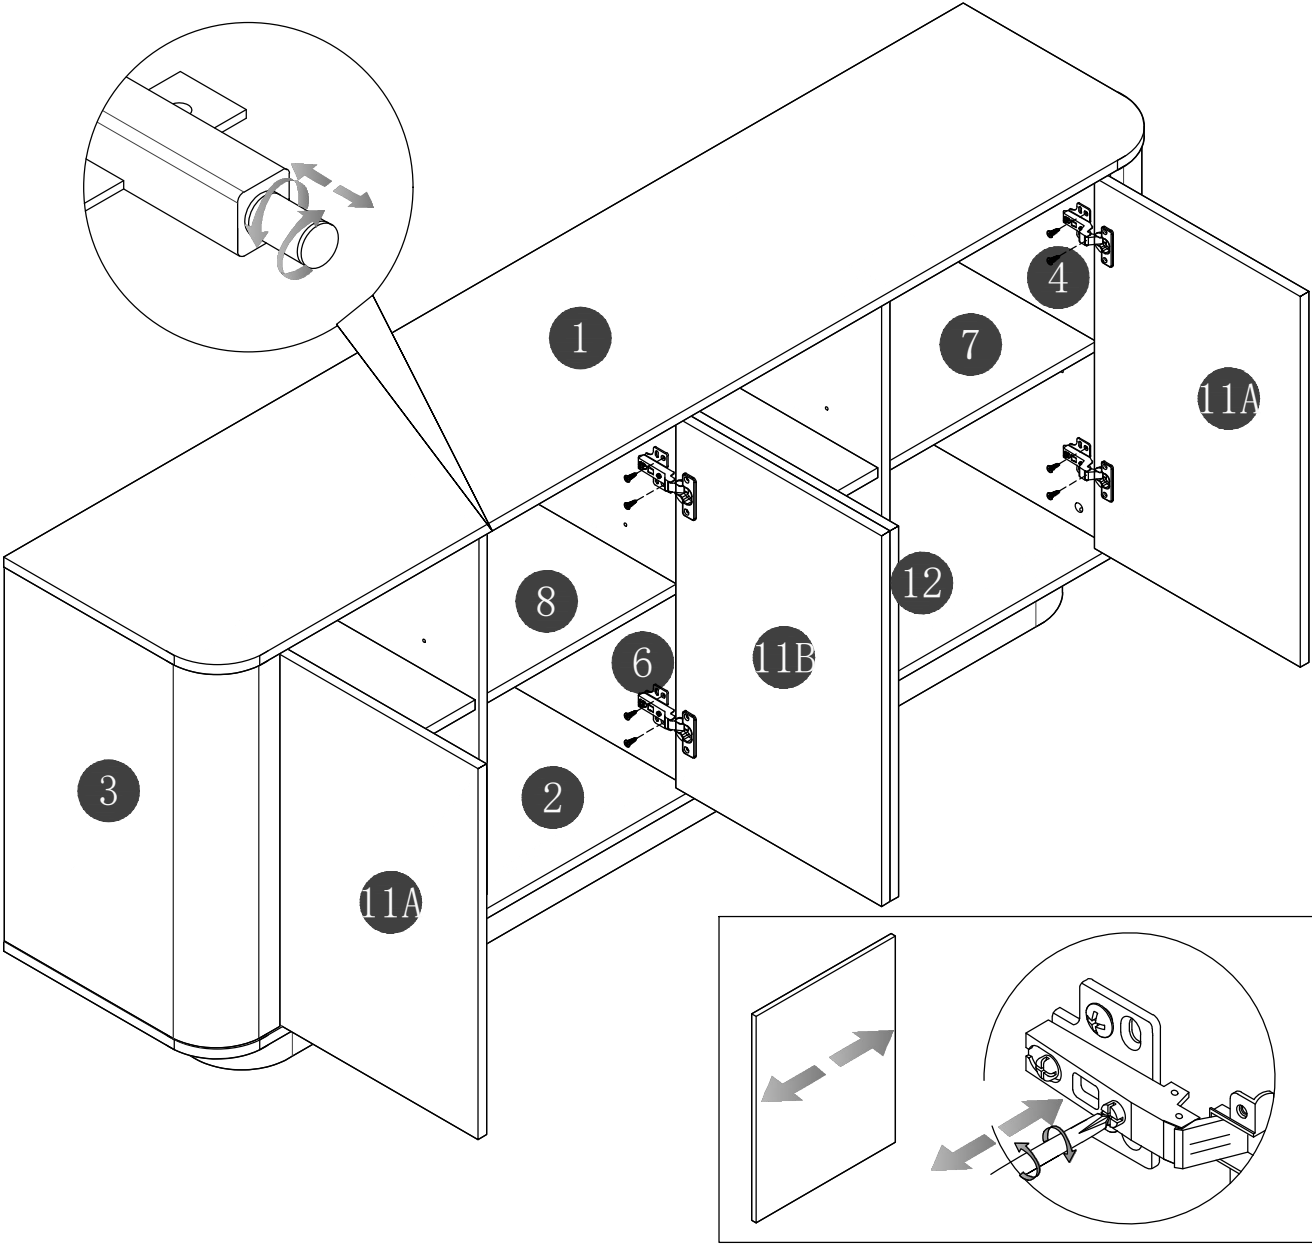


STEP 10

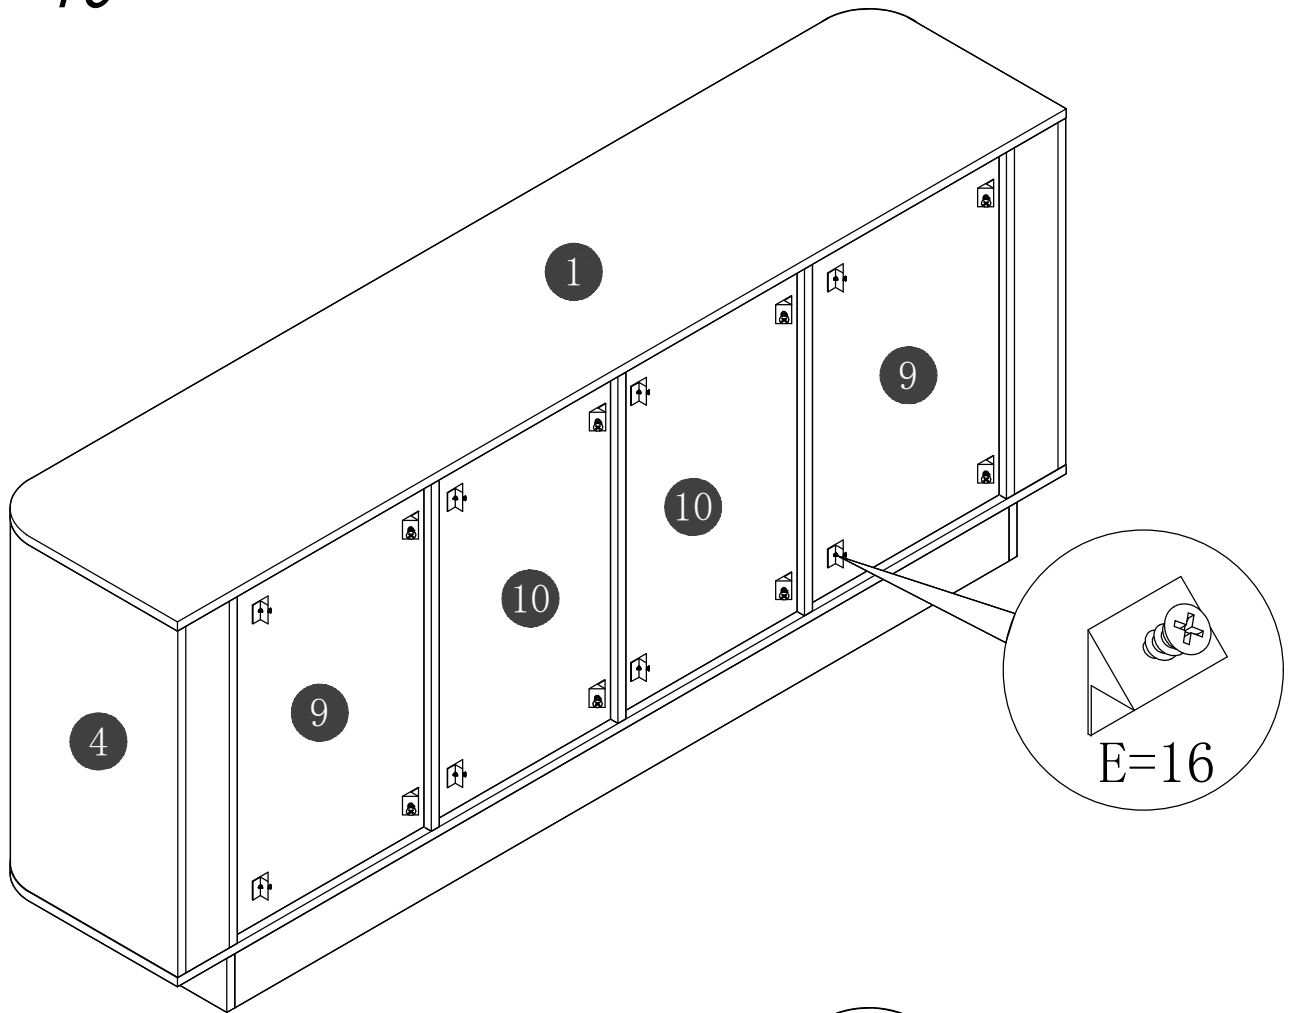

STEP 11

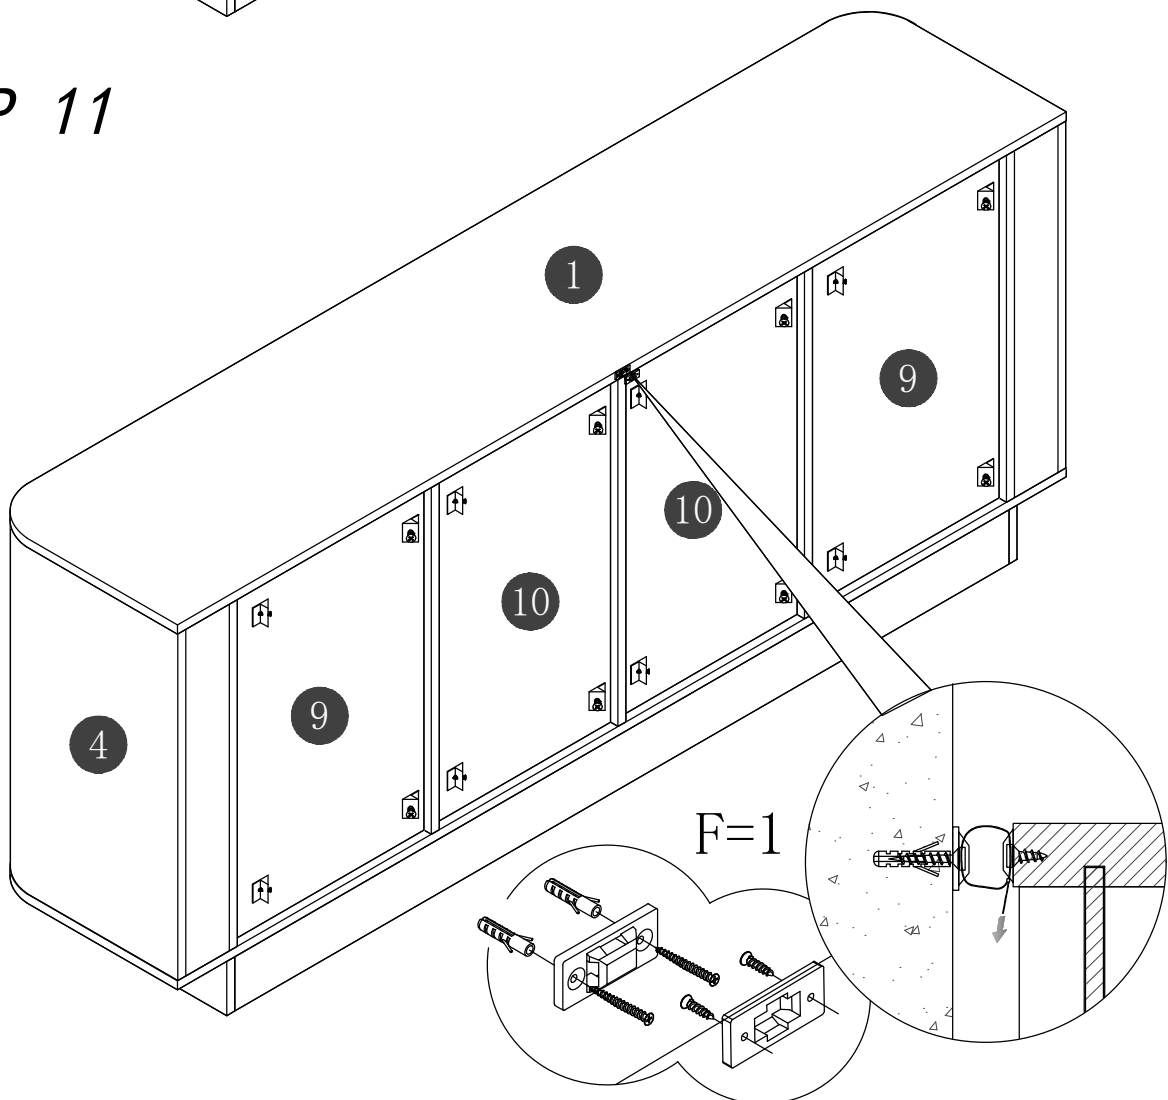

STEP 12

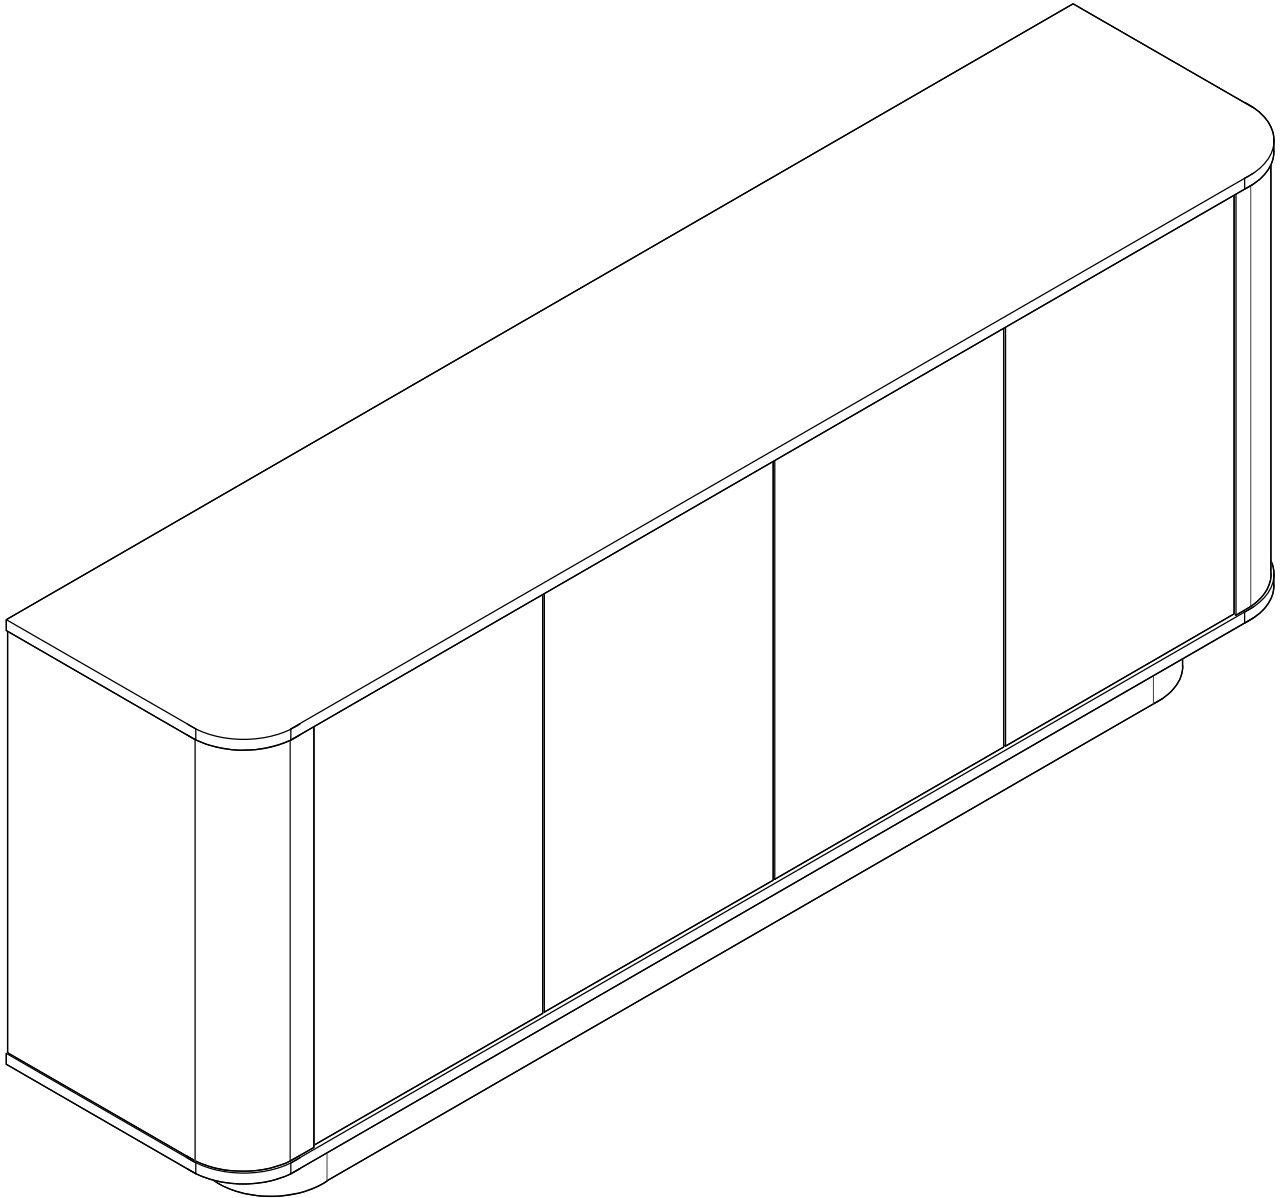

Importer: Maskun Kalustetalo Oy
Order number: T6103291
Item number: 209295
Contact: www.masku.com
tuoteturvallisuus@masku.com

Finish