

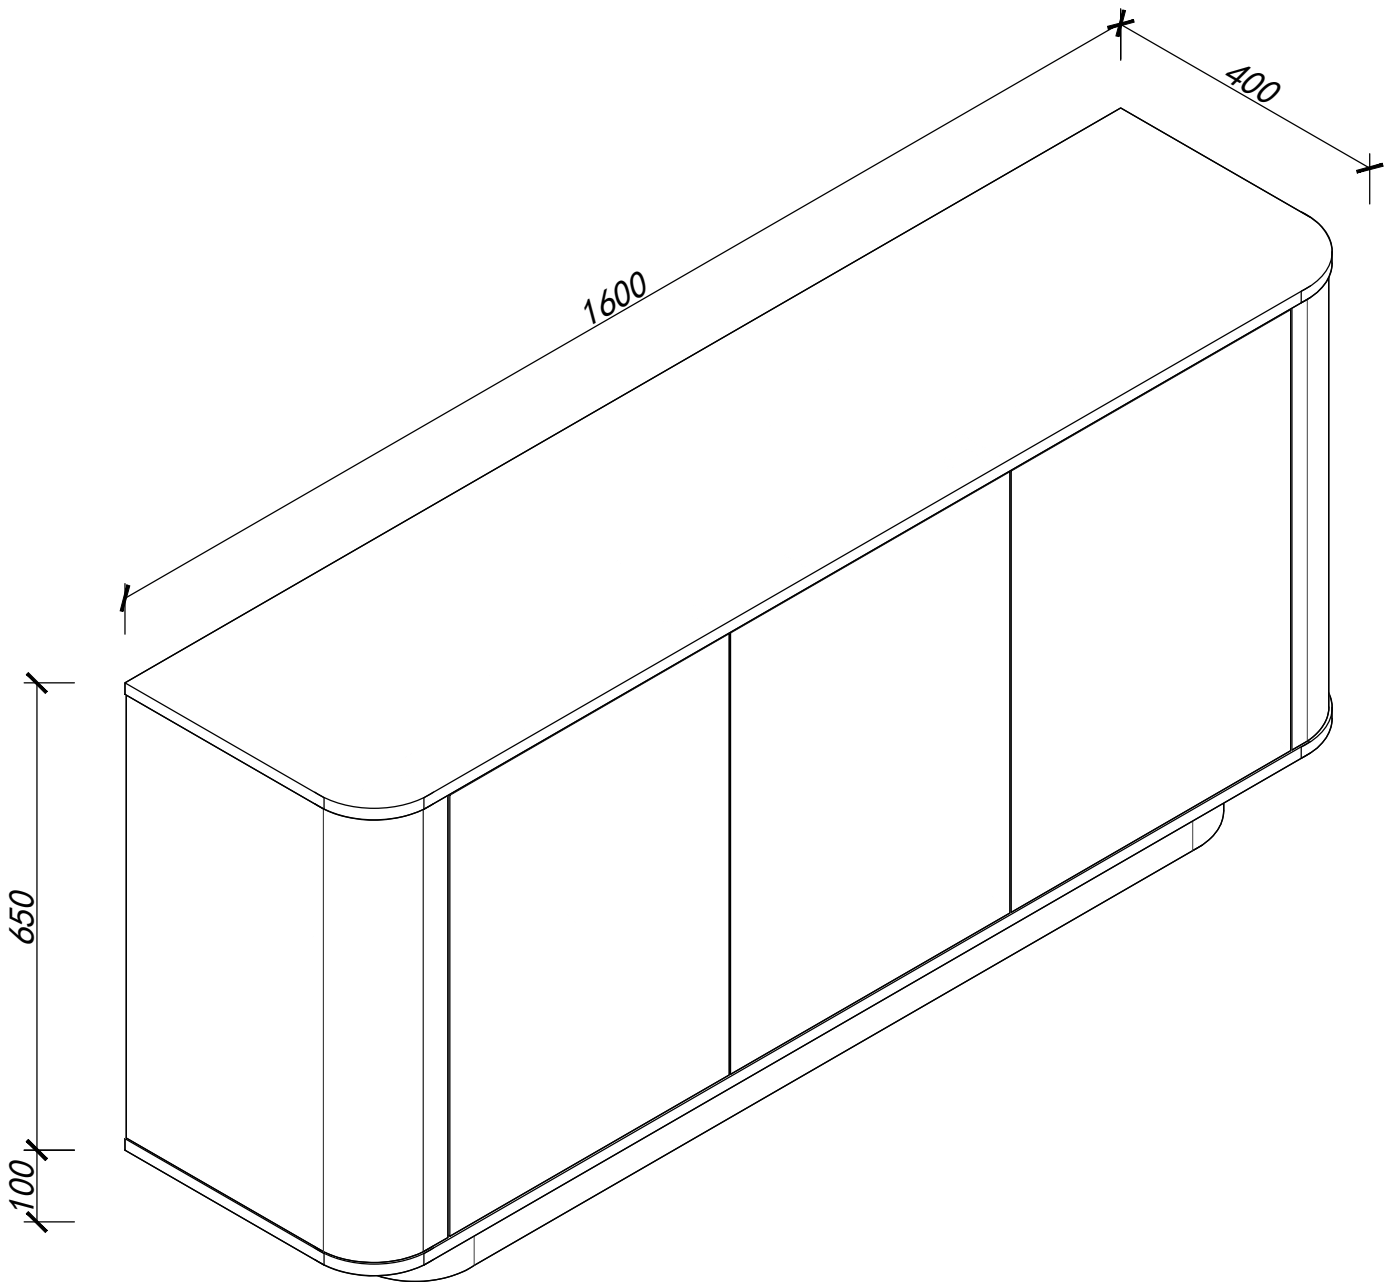
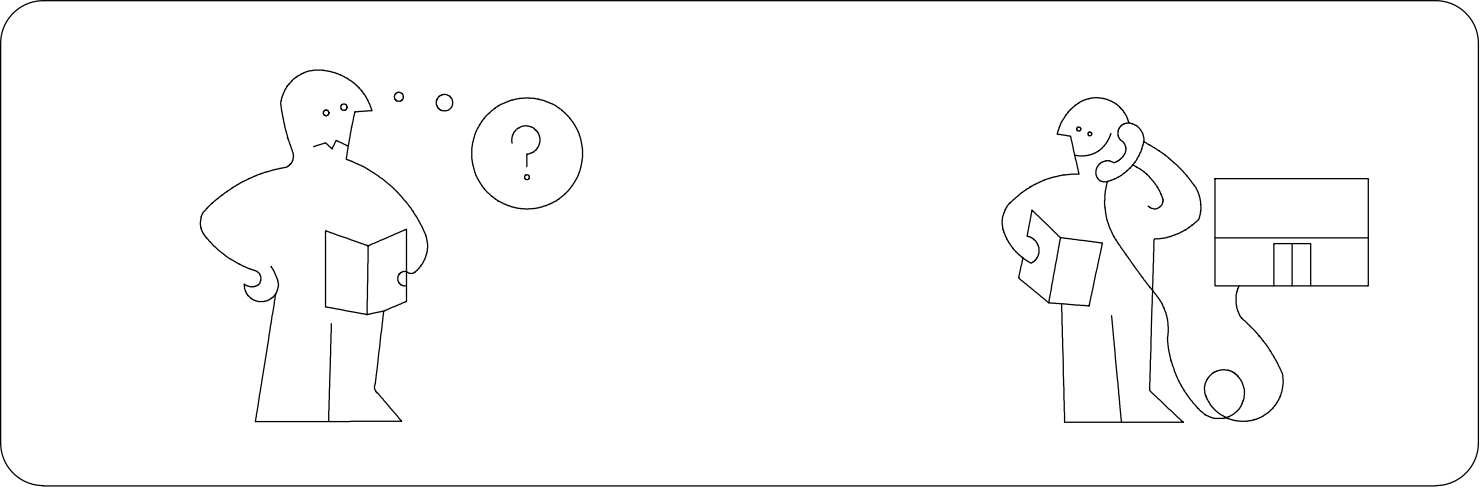
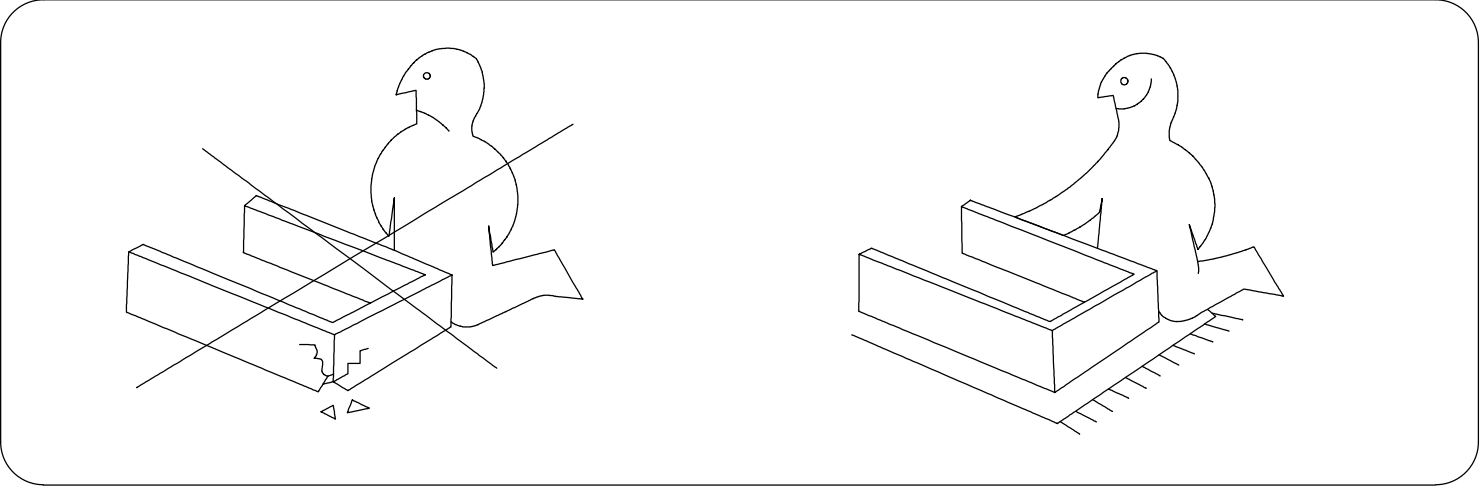


# Assembly Instruction

## Janni Sideboard 3 doors


### 209294

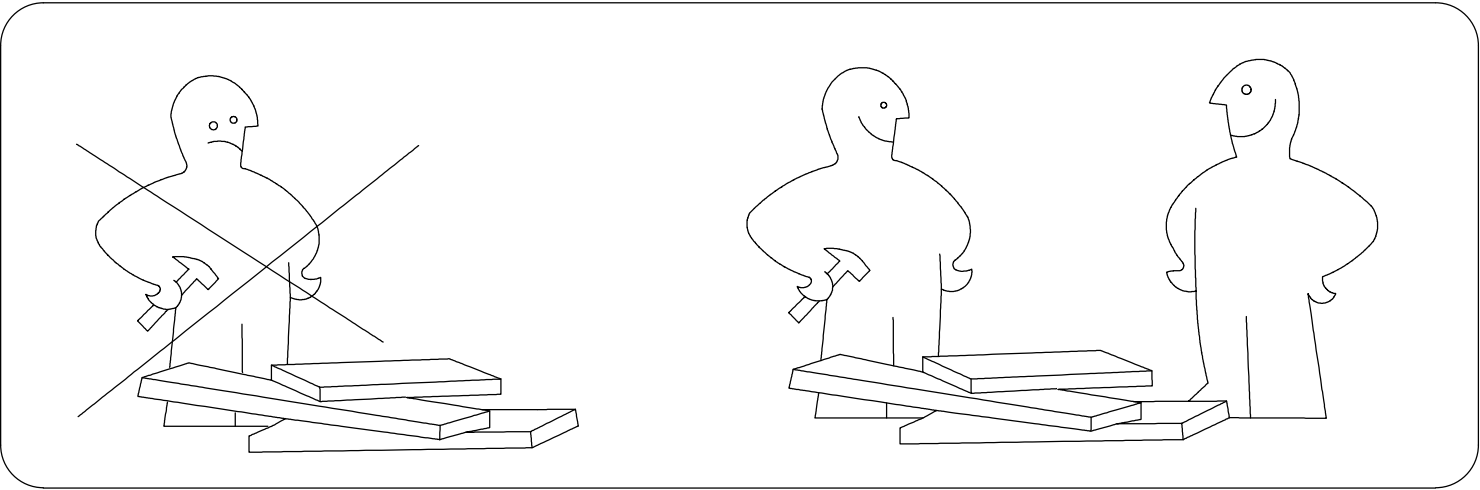

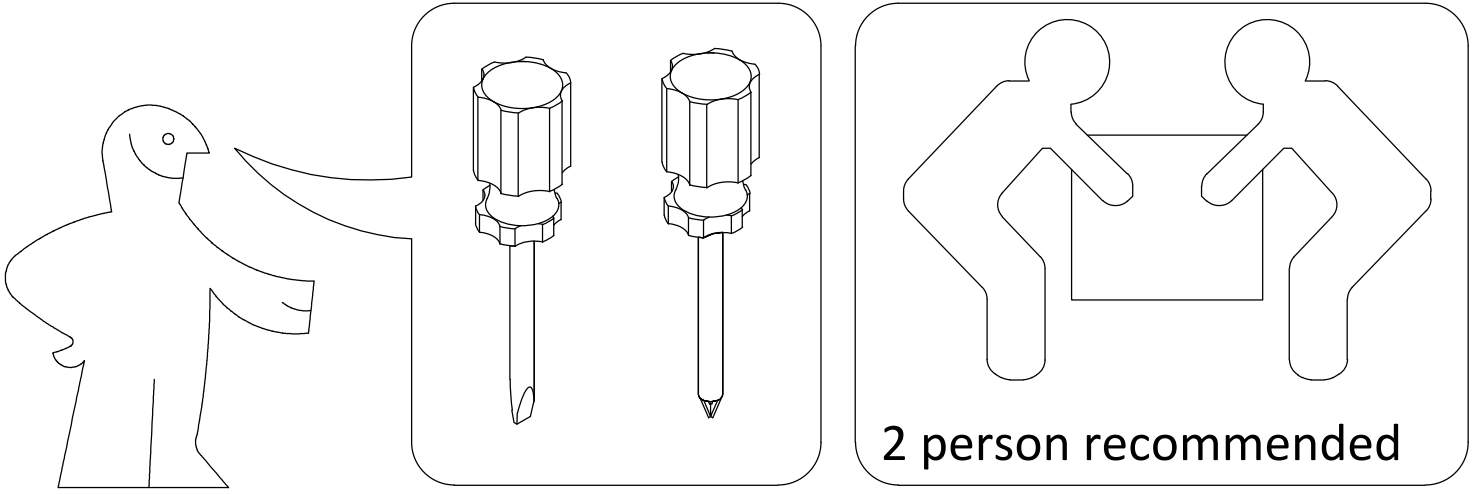

Panel No	Panel Sizes	Quantity
1	1600*400*16	1
2	1600*400*111	1
3	396*120*618	1
4	396*120*618	1
5	618*377*16	1
6	618*377*16	1

Panel No	Panel Sizes	Quantity
7	443*350*16	2
8	432*350*16	1
9	628*456*5	2
10	628*445*5	1
11A/B	612*450*16	3

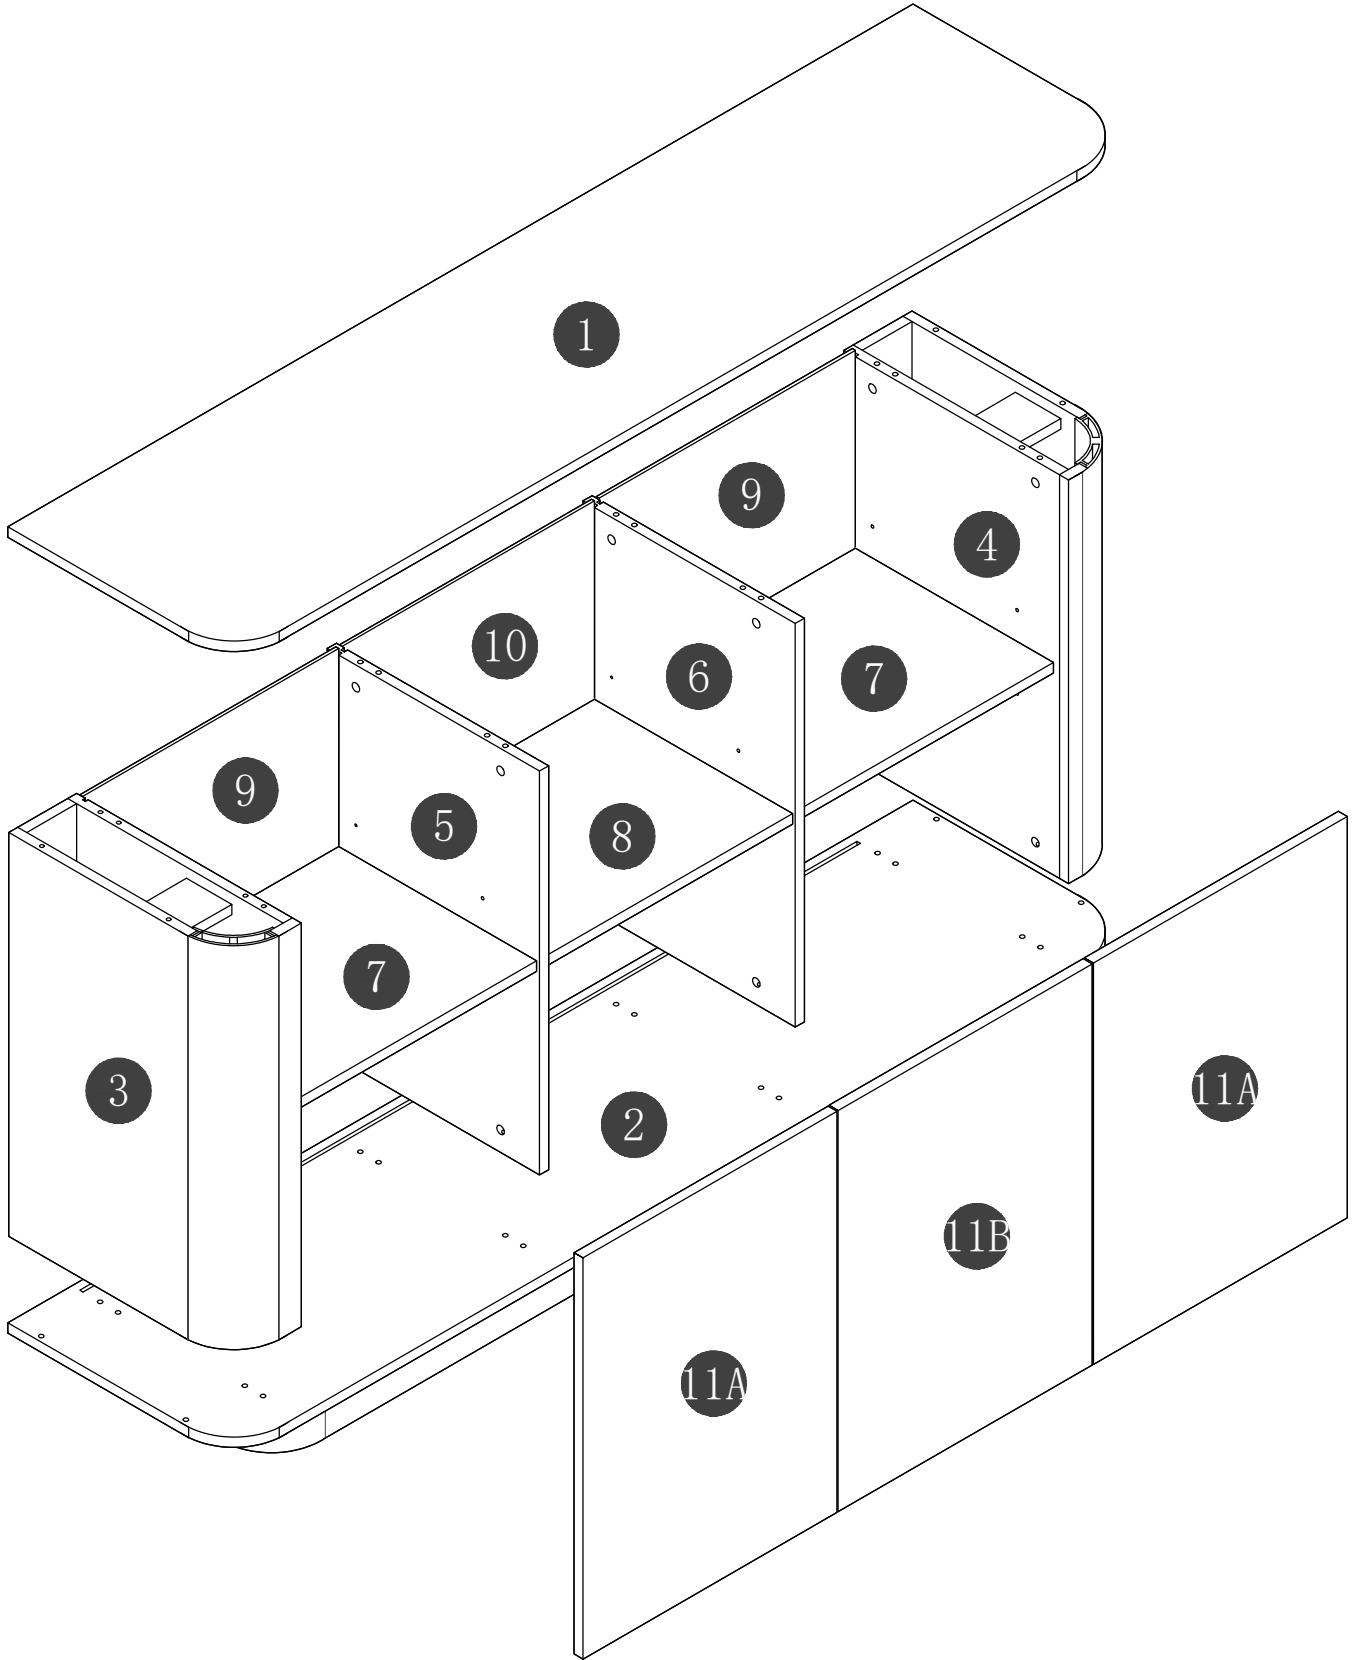


# Fittings




M6\*40

A=16



Φ8\*30

B=24

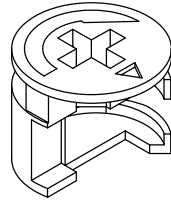


Φ15\*12

C=16




Φ21


D=16

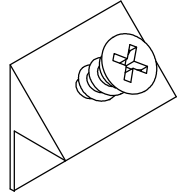


E=12

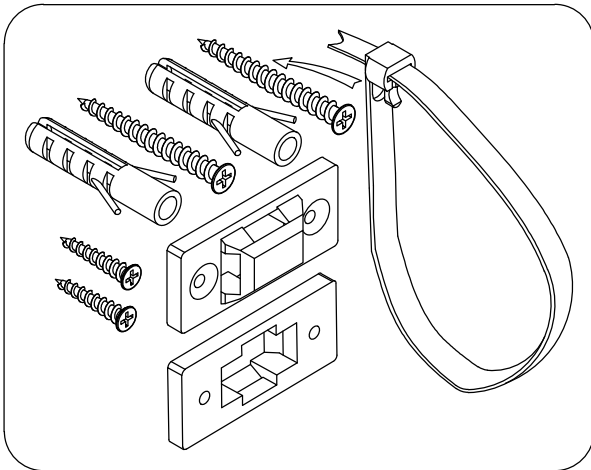


F=1

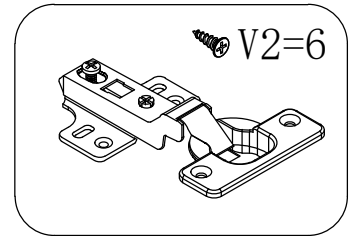


I2=2

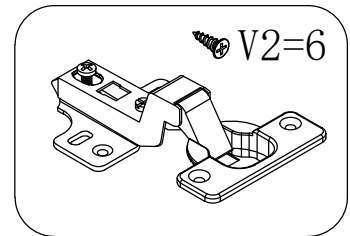

I3=4

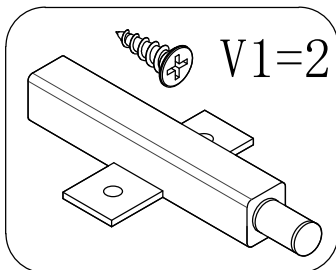


K=3

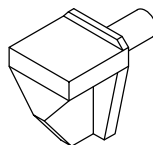


L=12


# STEP 1

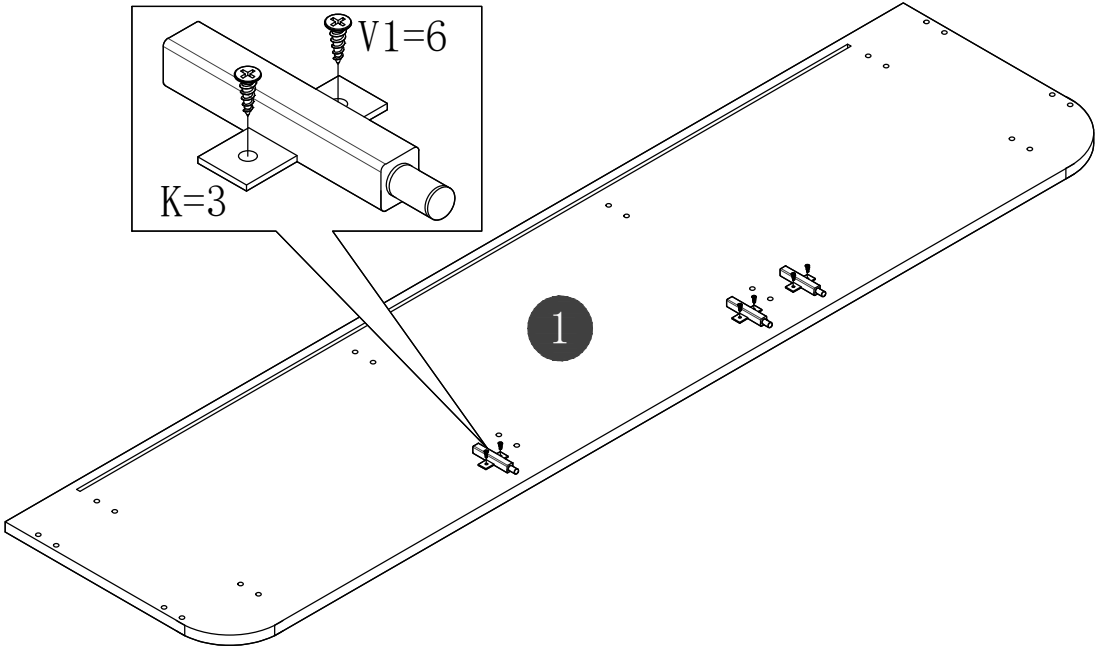


# STEP 2

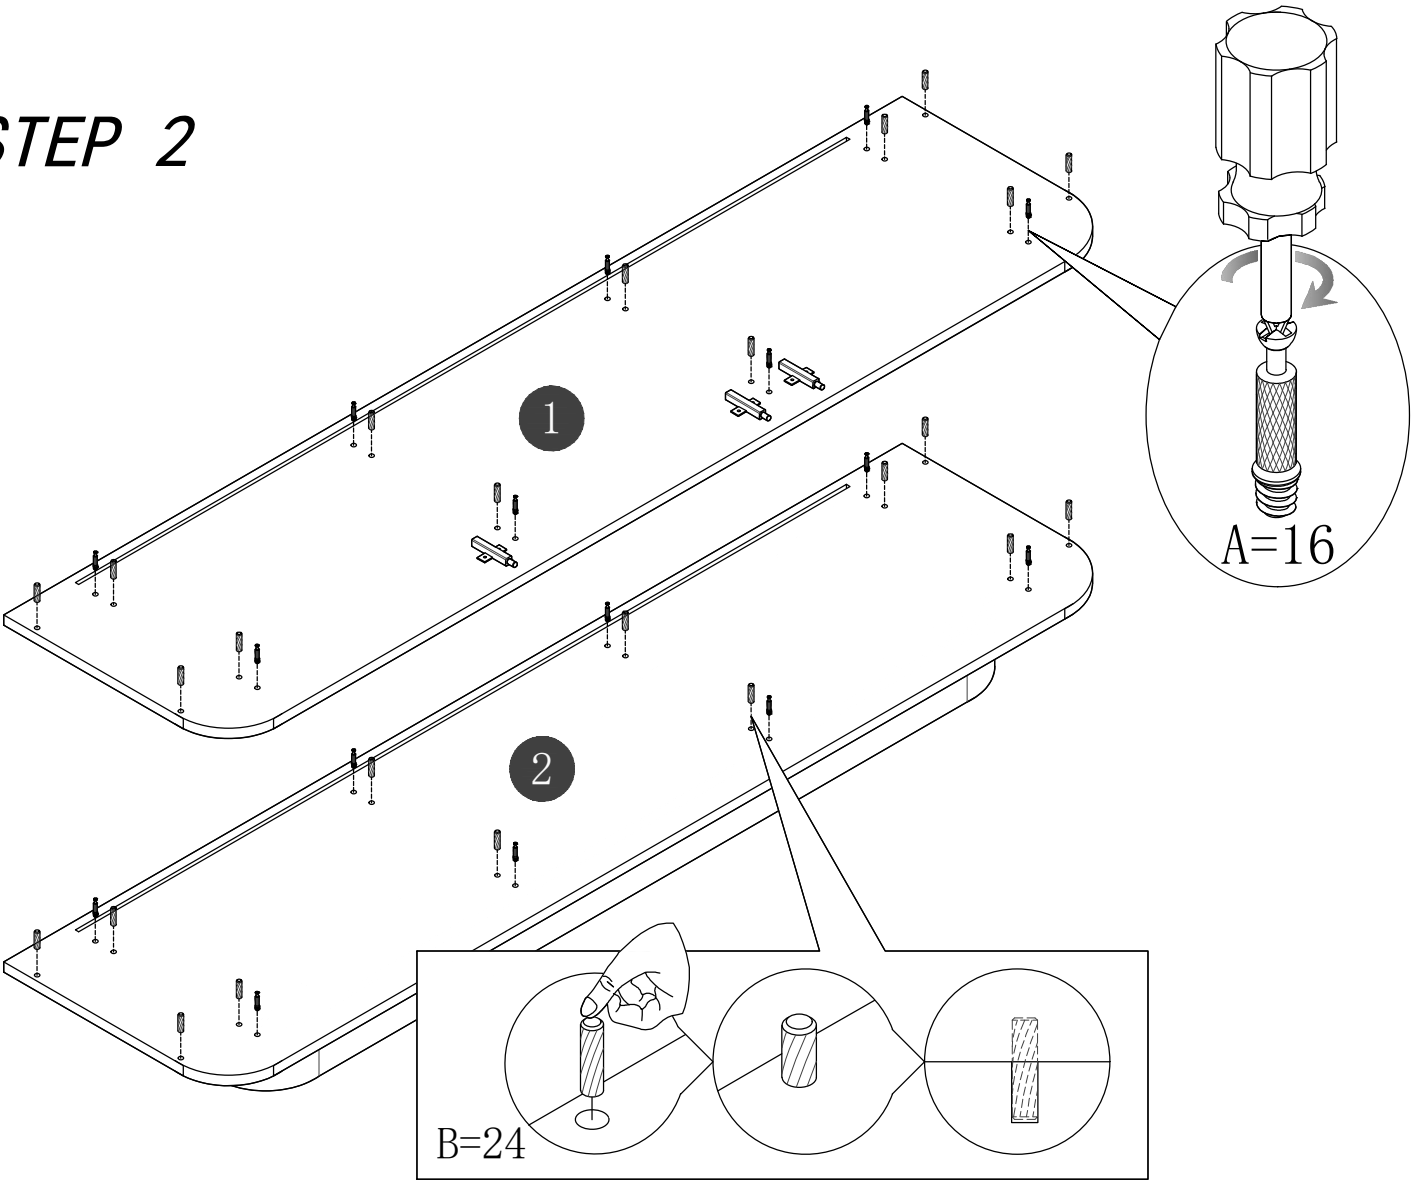


# STEP 3

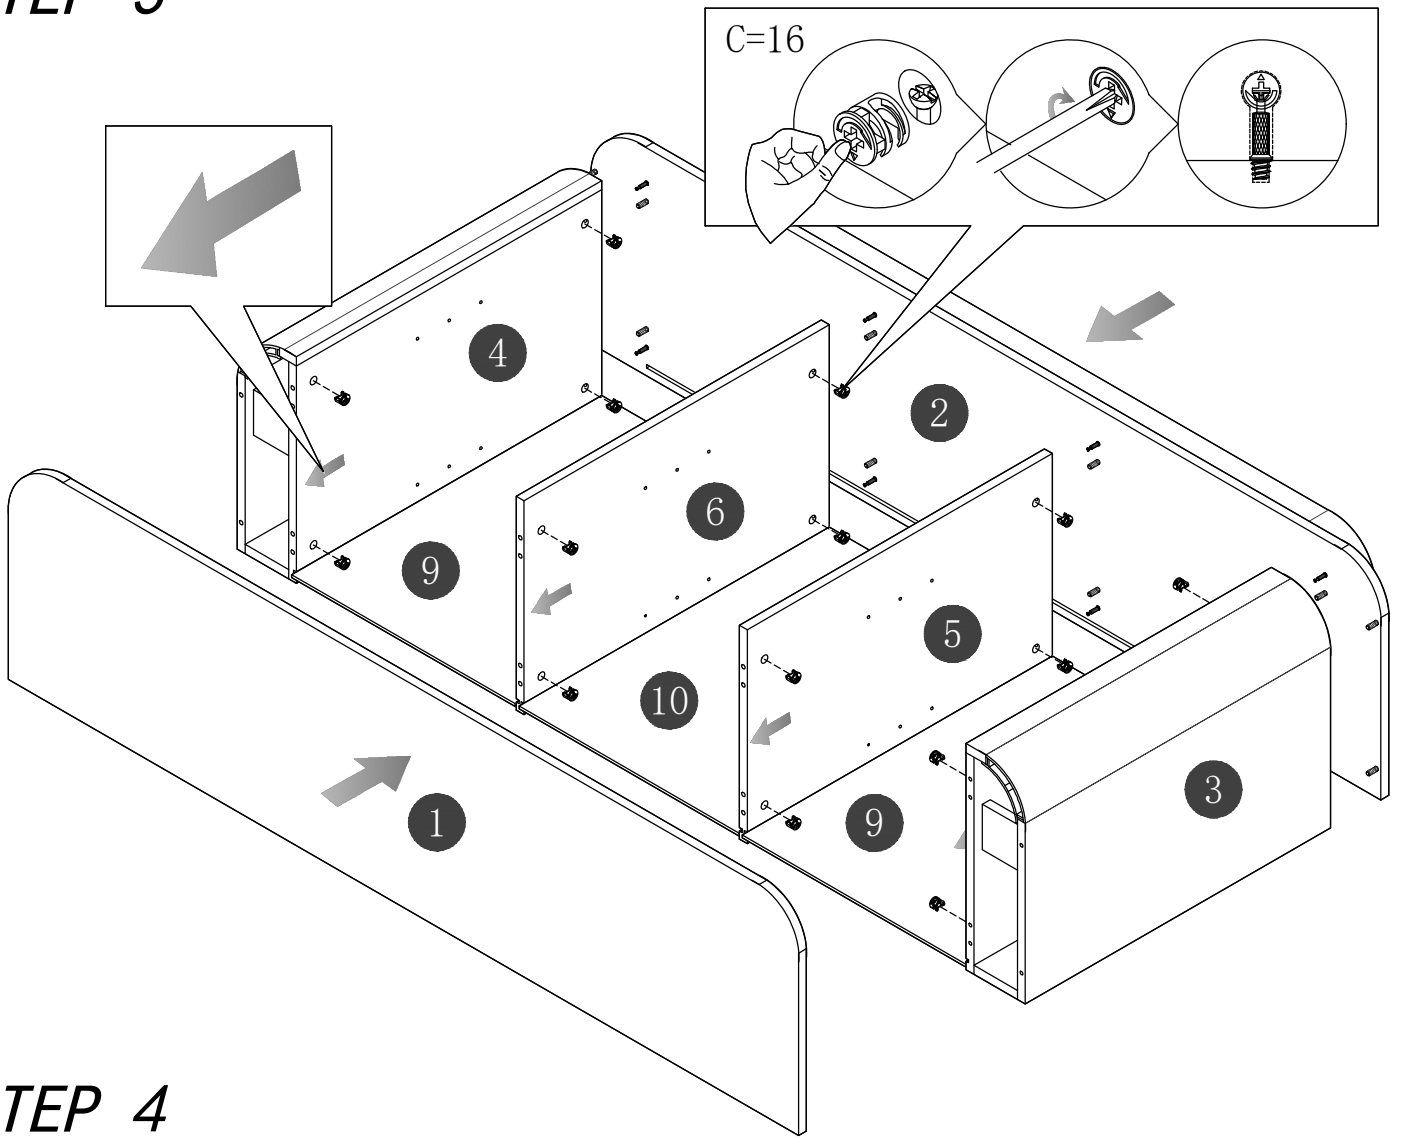


# STEP 4

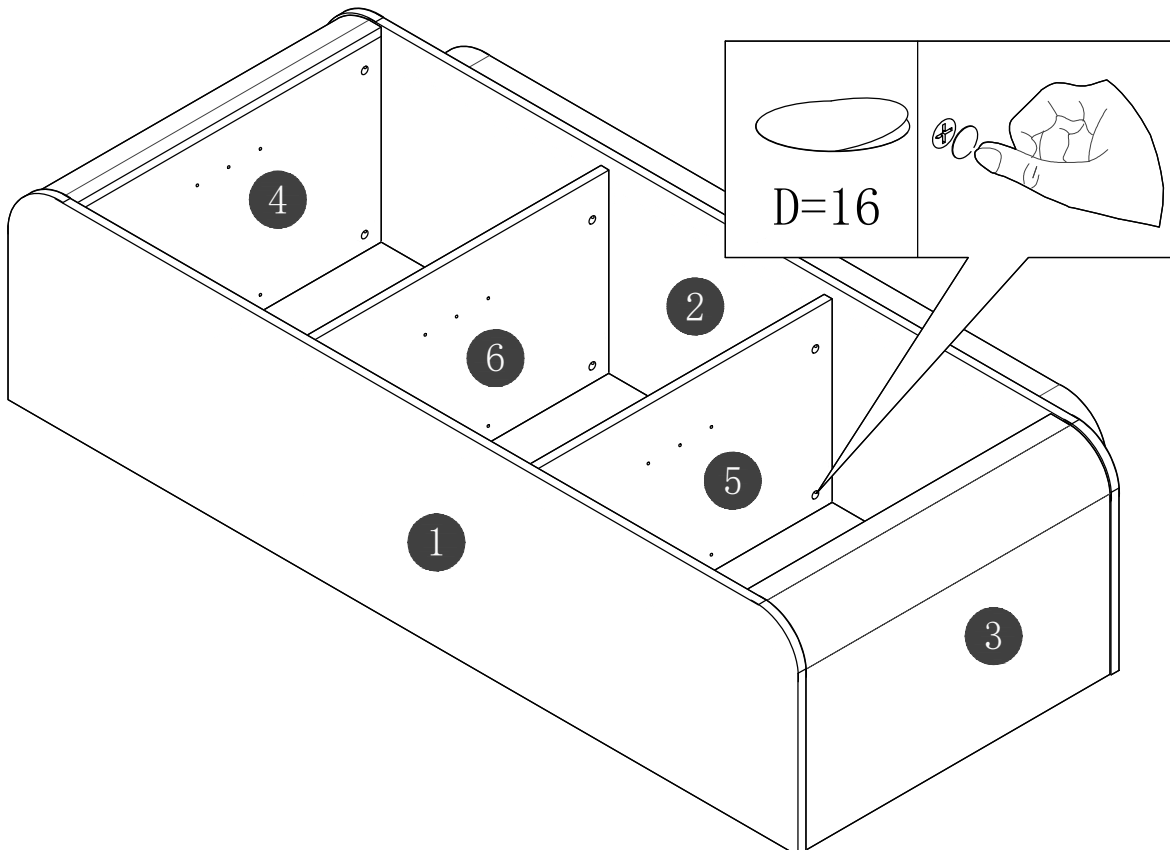


# STEP 5

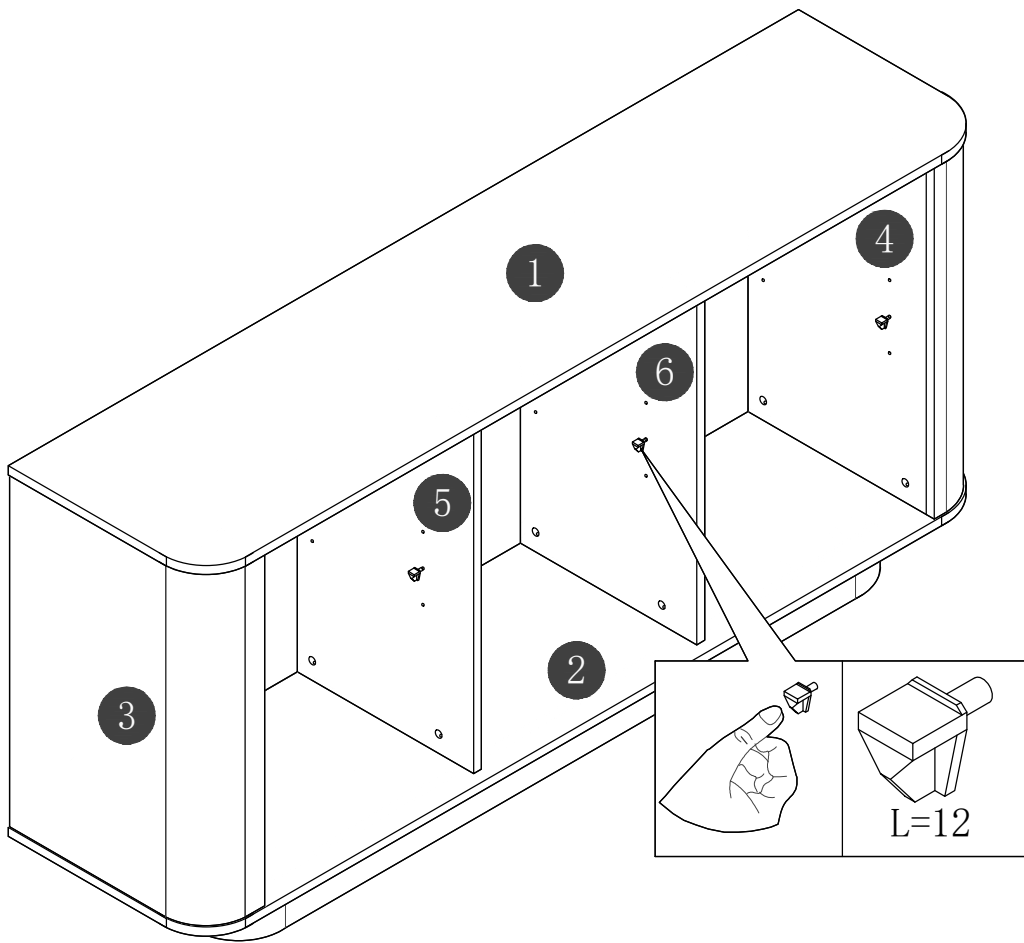


# STEP 6

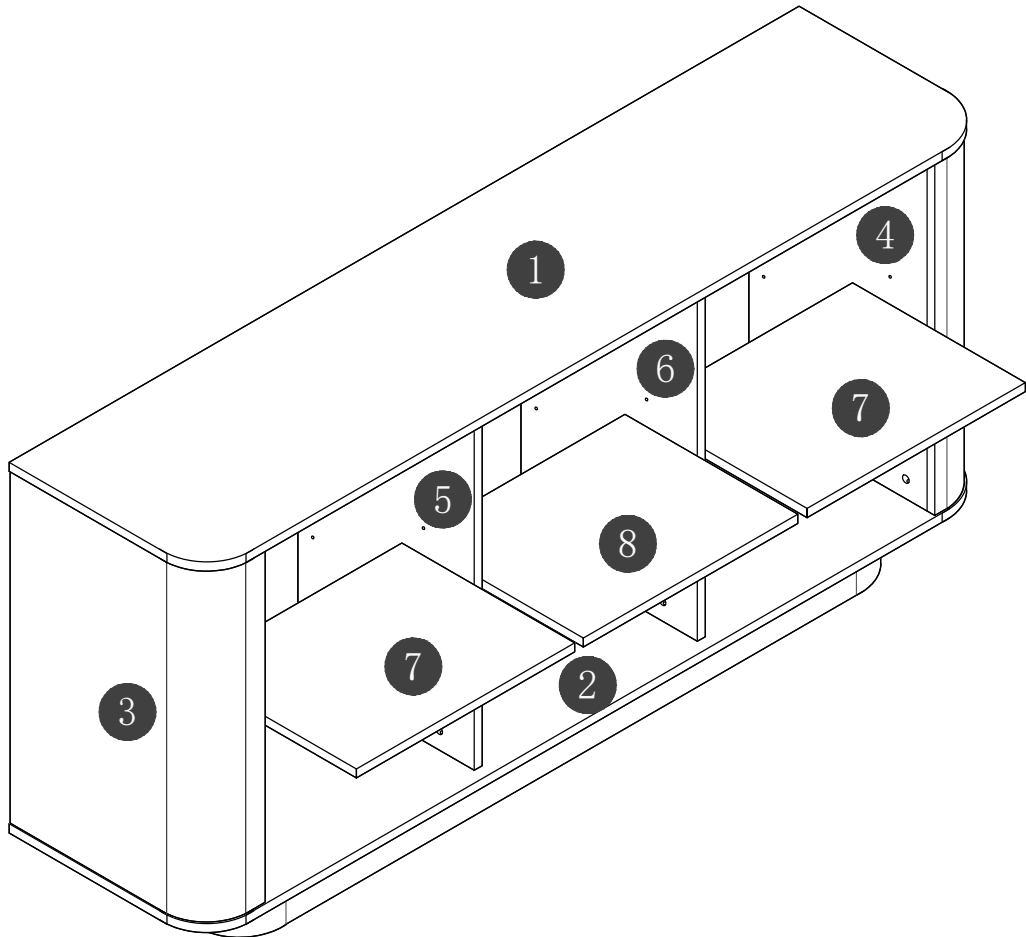





# STEP 7

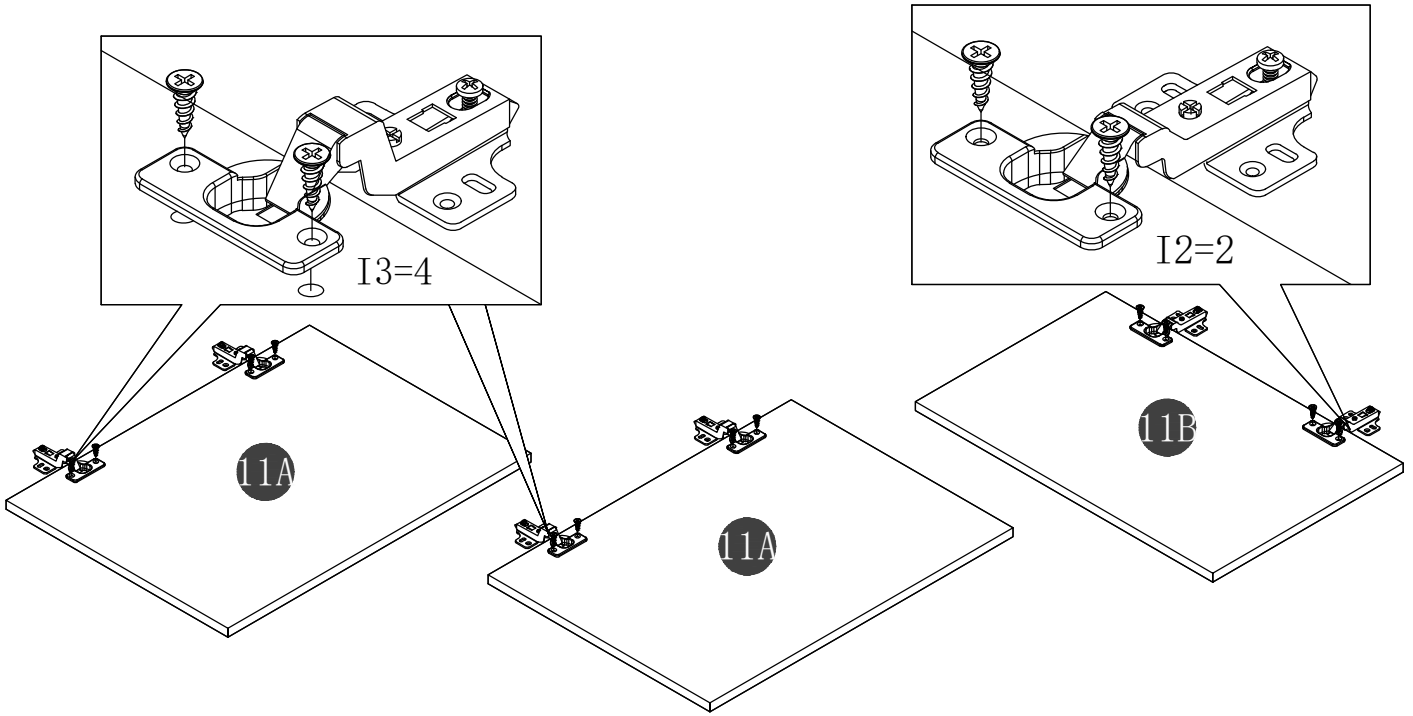


# STEP 8

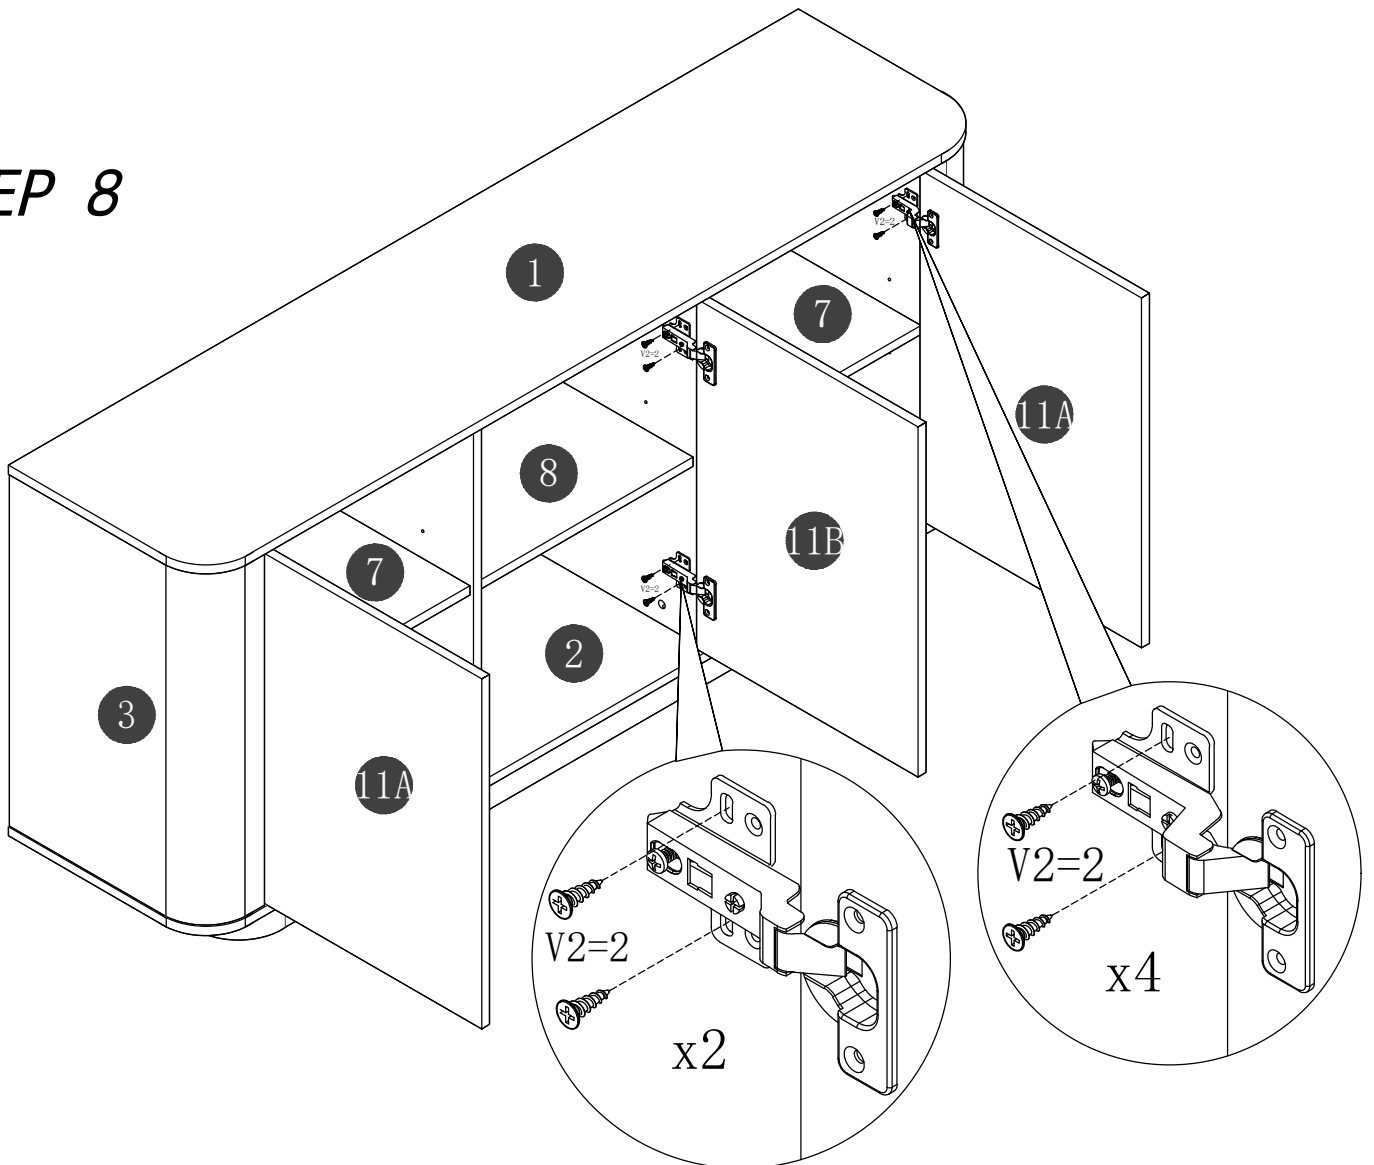


# STEP 9

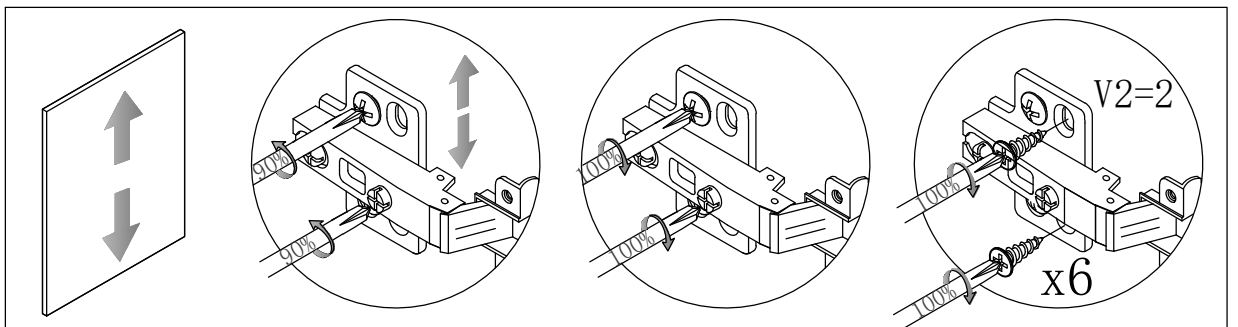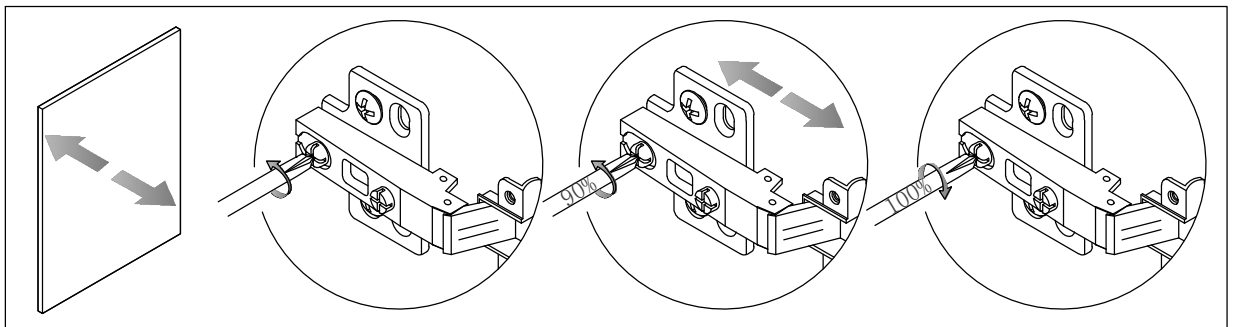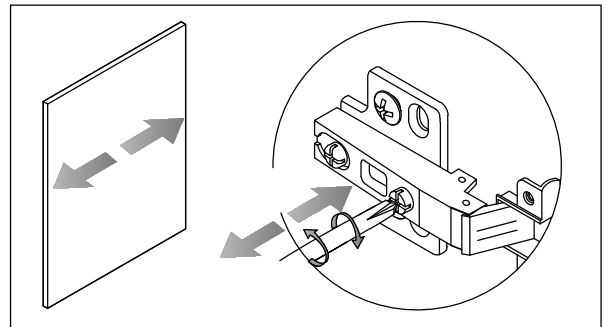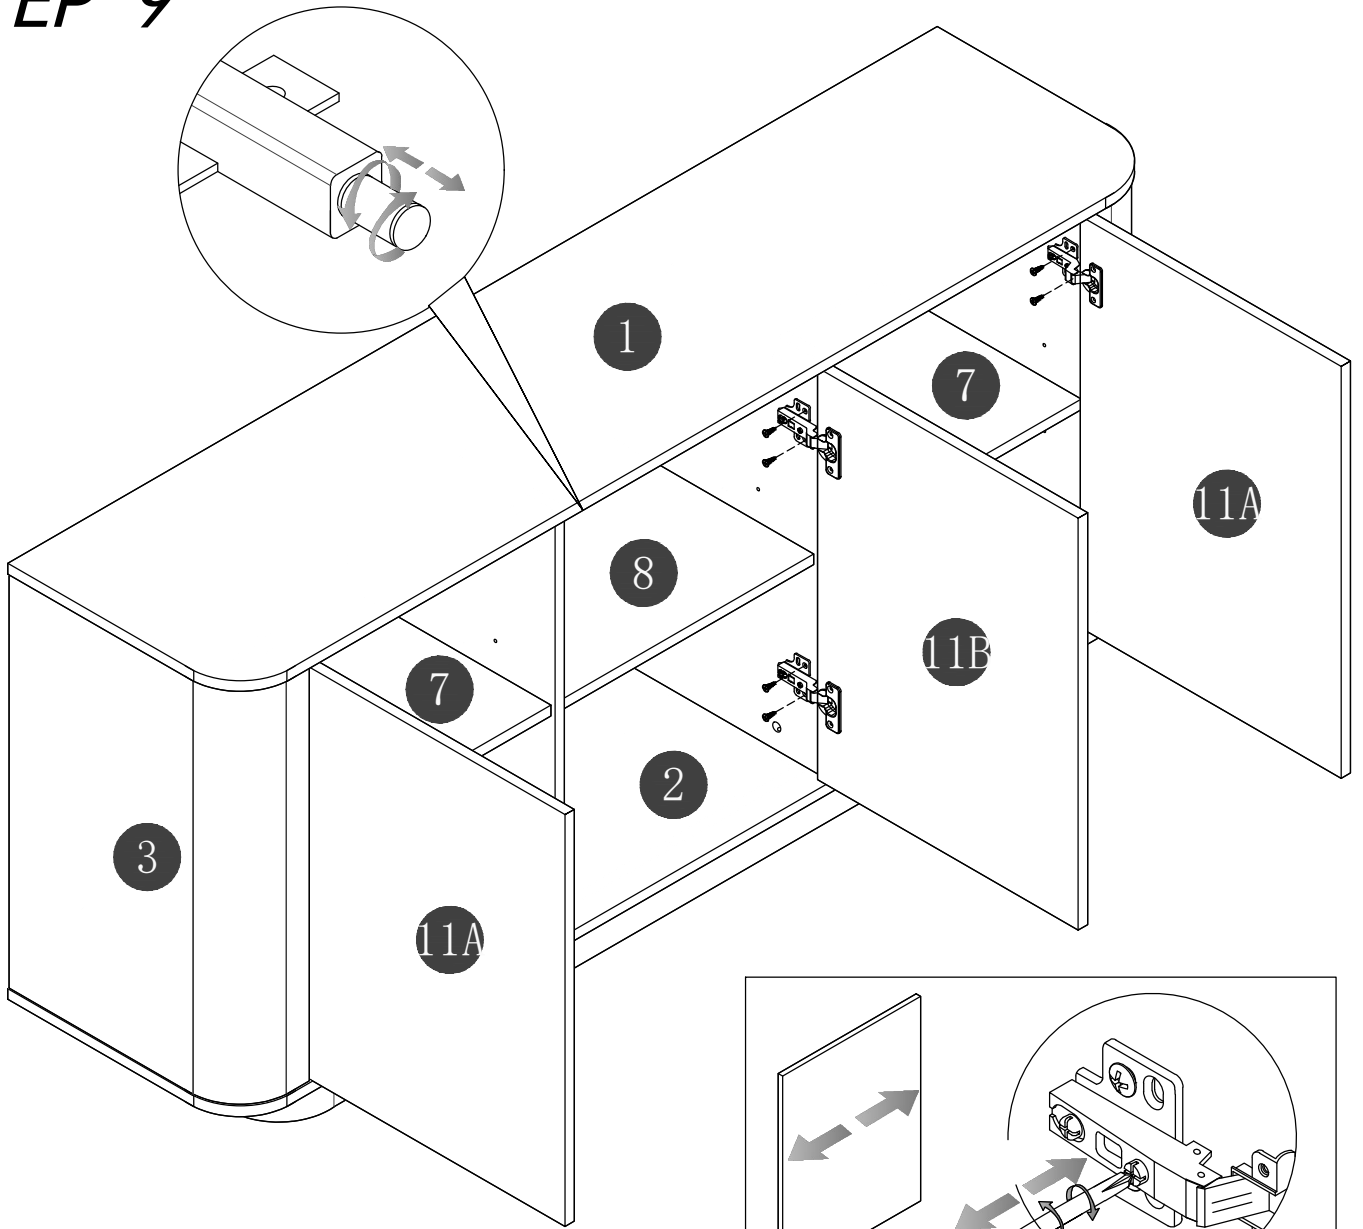


# STEP 10

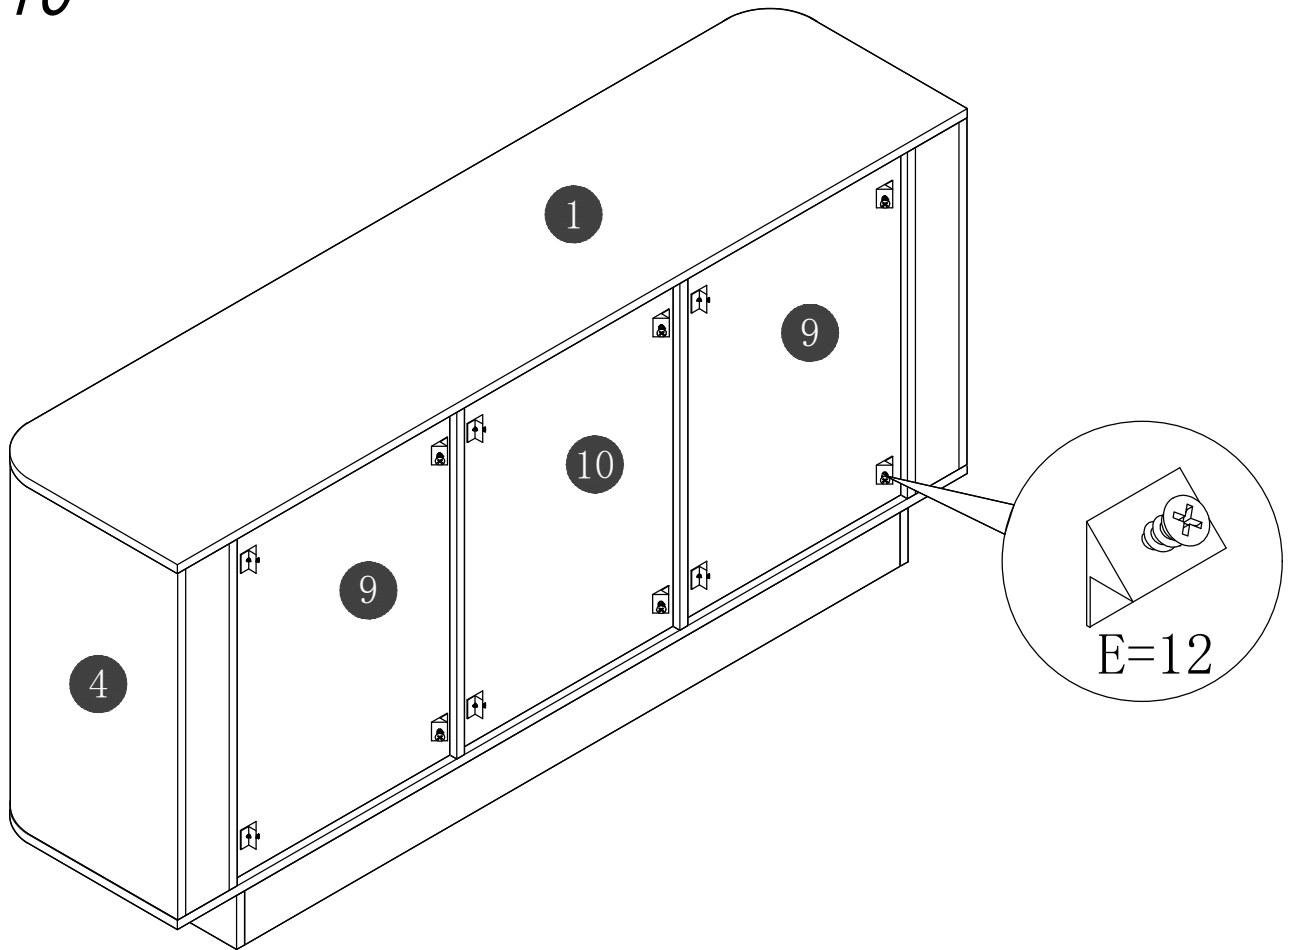

# STEP 11

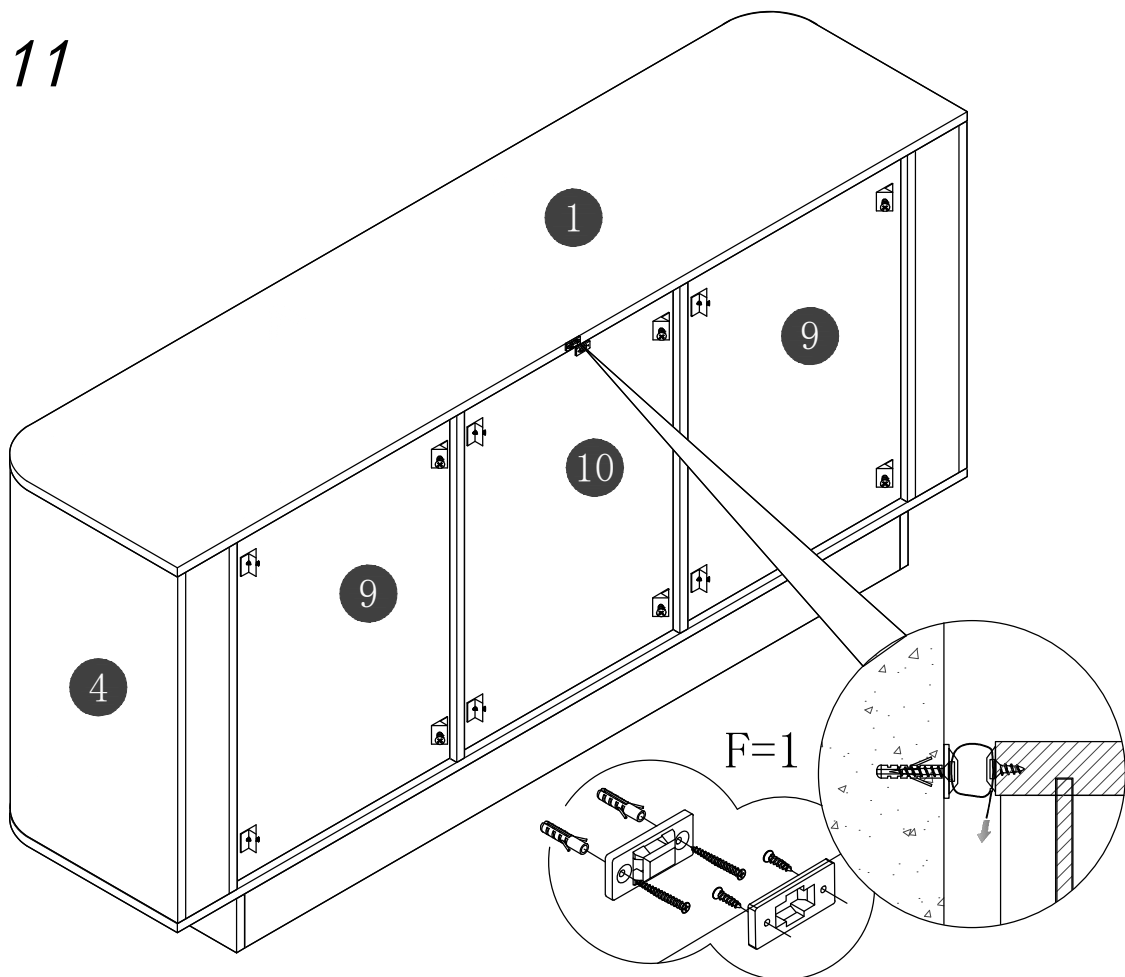

# STEP 12

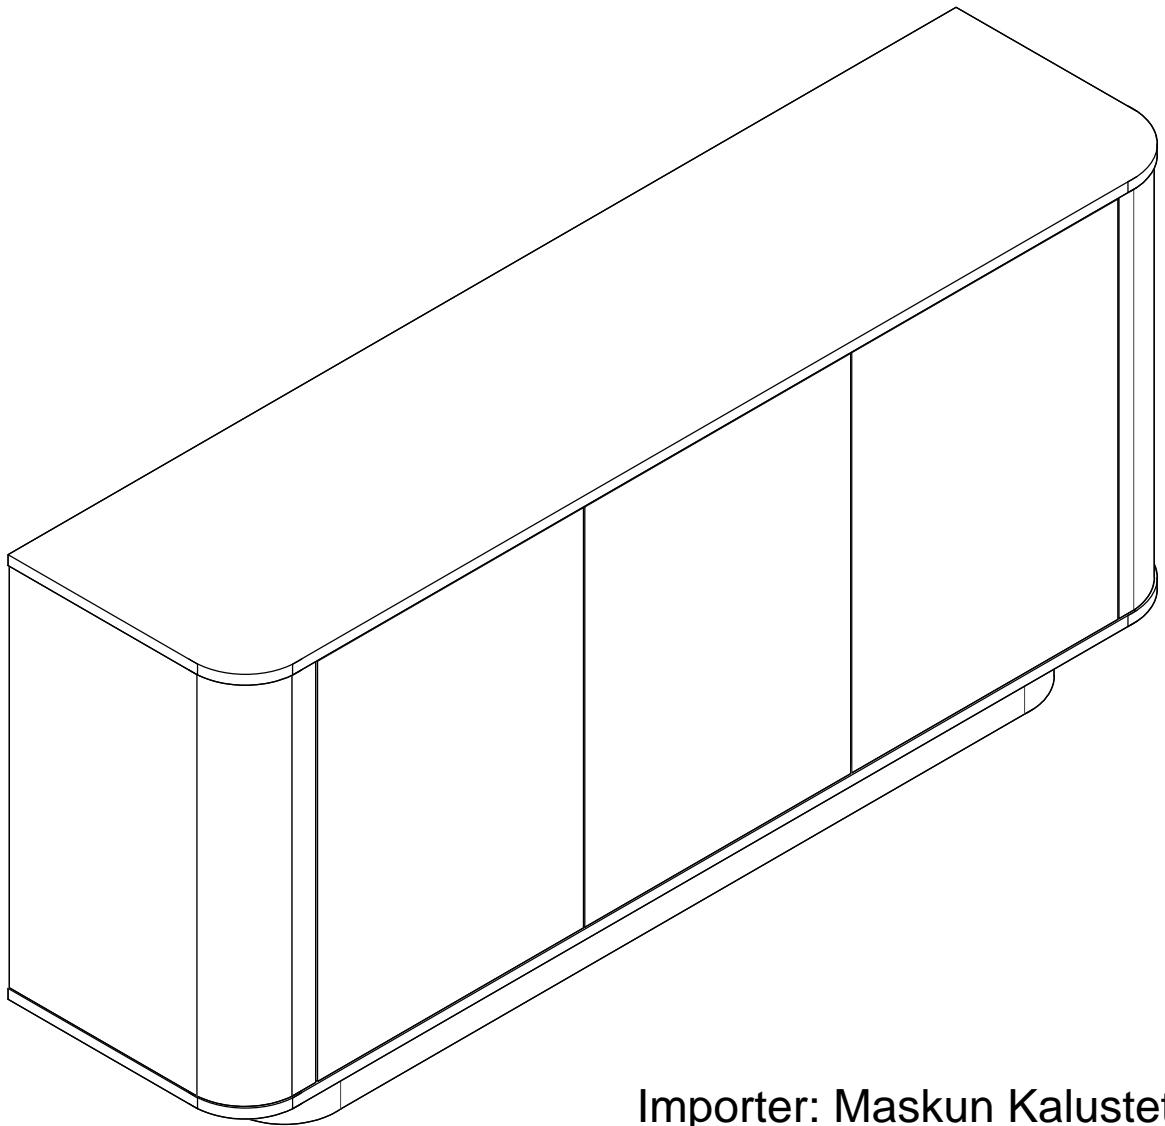

Importer: Maskun Kalustetalo Oy  
Order number: T6103291  
Item number: 209294  
Contact: [www.masku.com](http://www.masku.com)  
[tuoteturvallisuus@masku.com](mailto:tuoteturvallisuus@masku.com)

*Finish*