


ASSEMBLY INSTRUCTION



DOT YÖPÖYTÄ, VIHREÄ

Item No.: 191399

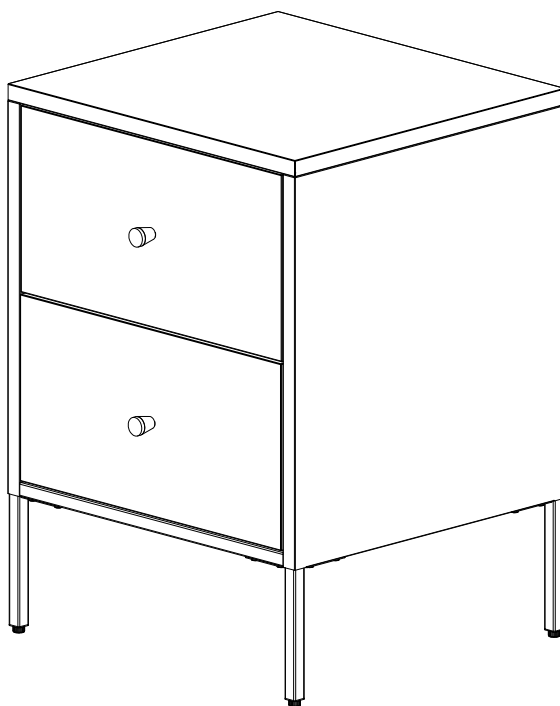

IMPORTANT NOTE:

Do not tighten all screws/bolts until the furniture is completely assembled.

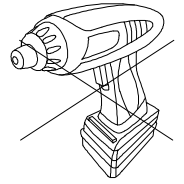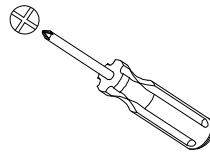

A × 34



M4x8mm

B × 2



C × 2



D × 2





E × 2



M4x5mm



6 × 4



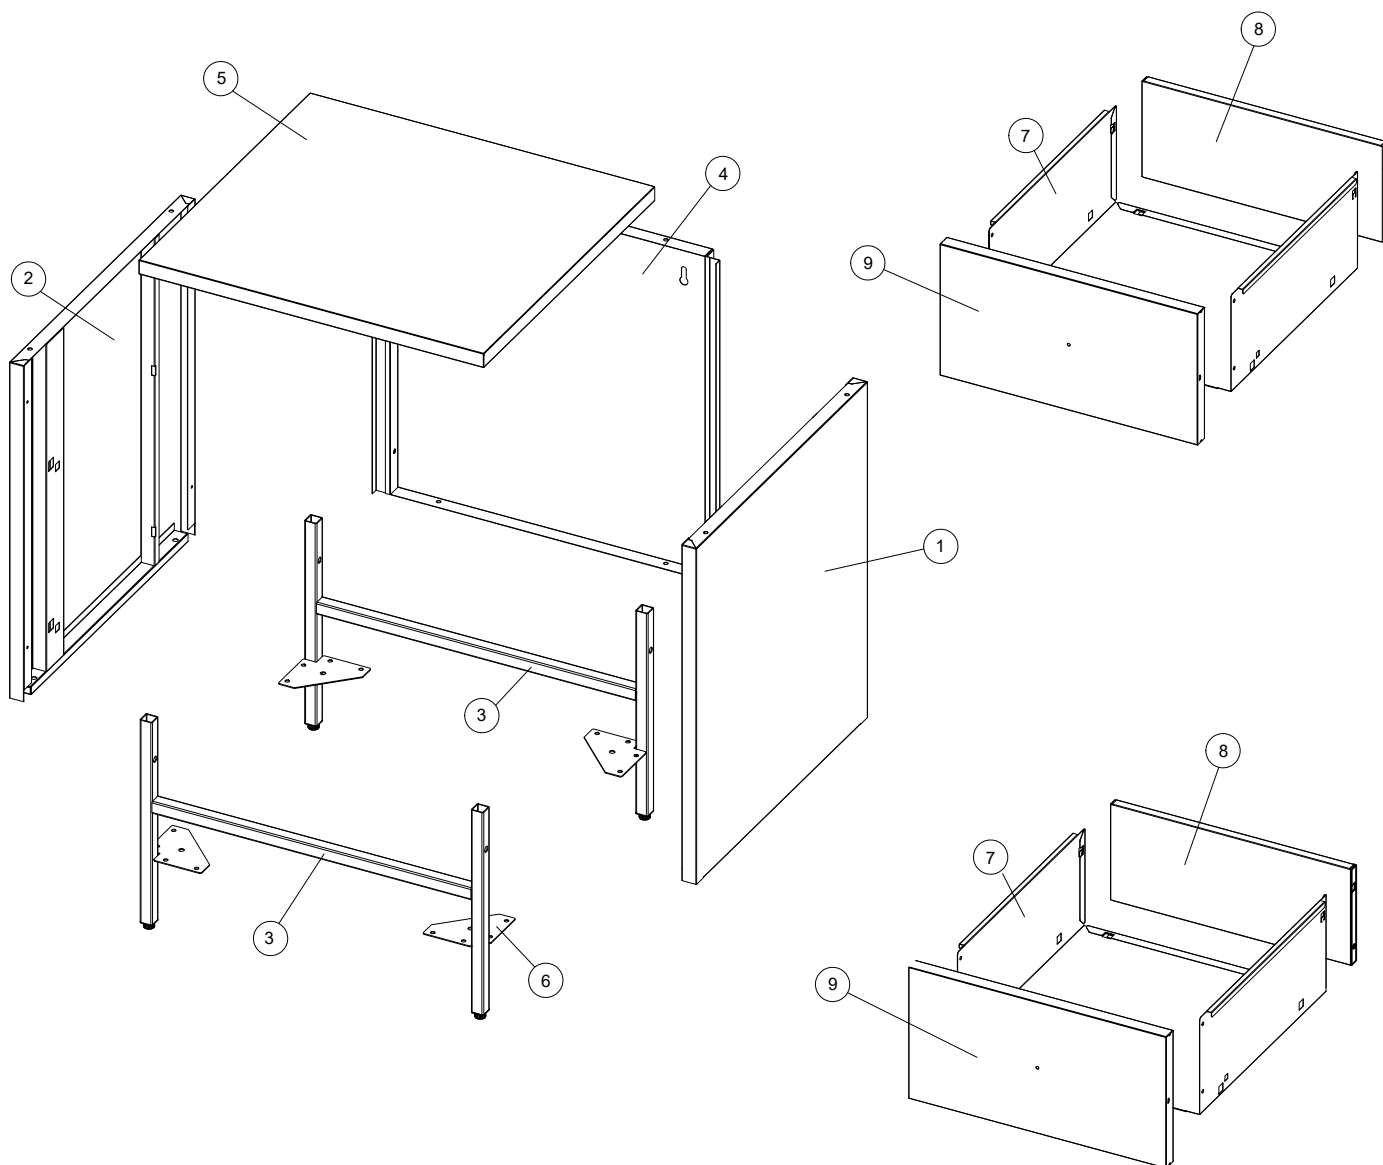

Box 1/1:

- | | | | | |
|---|----|---|----|----|
| 1 | 2 | 4 | 5 | x1 |
| 7 | 8 | 9 | x2 | |
| 6 | x4 | | | |

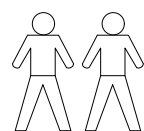

1

B × 2




step 2

step 1

First, follow the arrow instructions in step 1 to install component B in place, and then follow the arrow instructions in step 2 to install it in place

Pay attention to the direction here

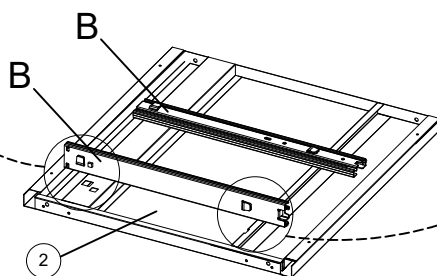

2

C × 2




step 1

step 2


First, follow the arrow instructions in step 1 to install component B in place, and then follow the arrow instructions in step 2 to install it in place



Pay attention to the direction here

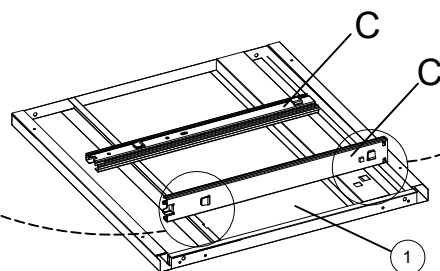

3

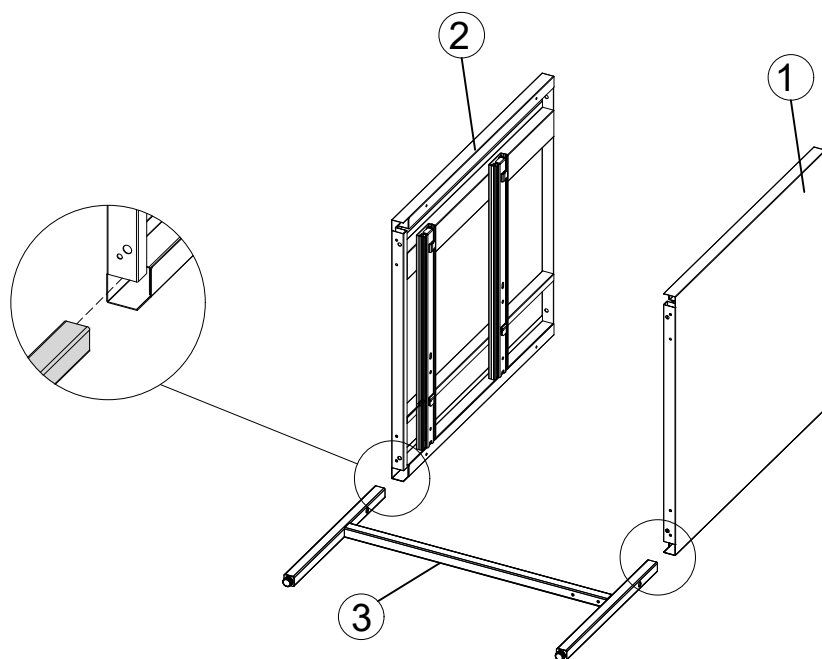



4

A x 8




M4x8mm

6 x 2

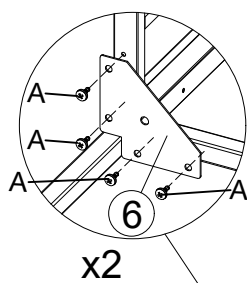

x2

5

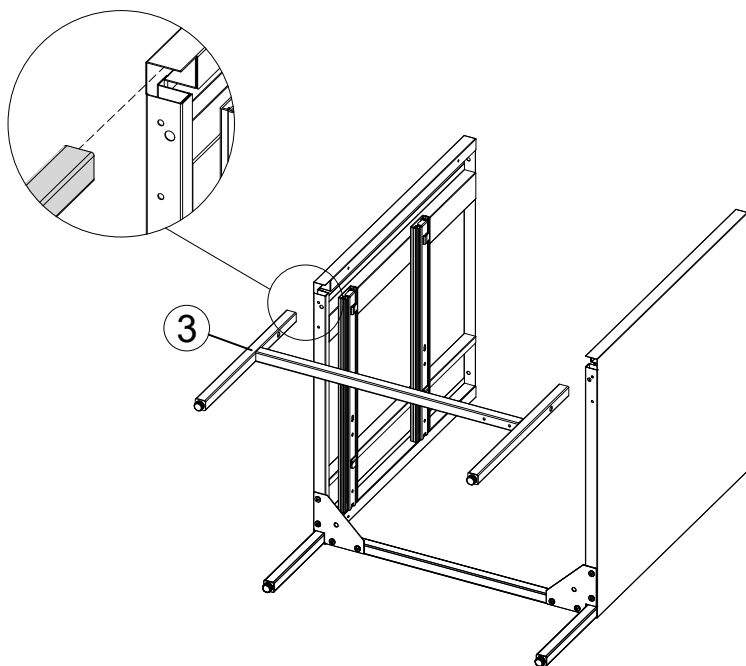




6

A x 8



M4x8mm

6 x 2

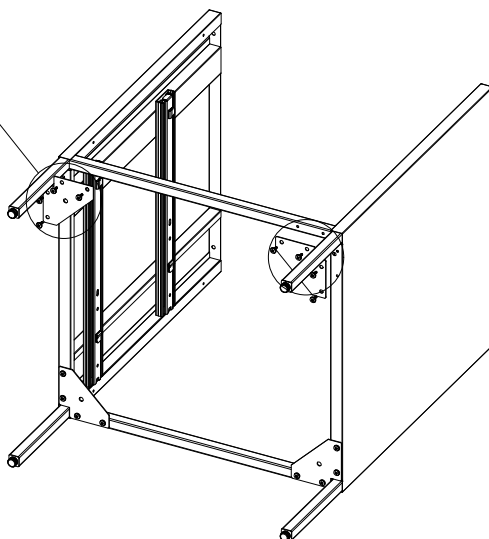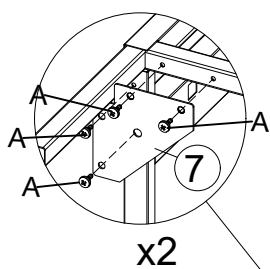



7

A x 4



M4x8mm

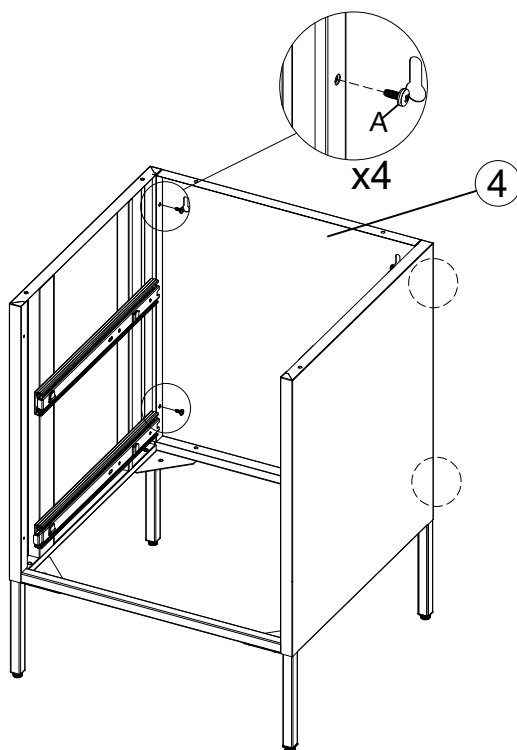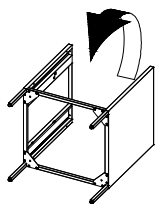


8


A x 6




M4x8mm

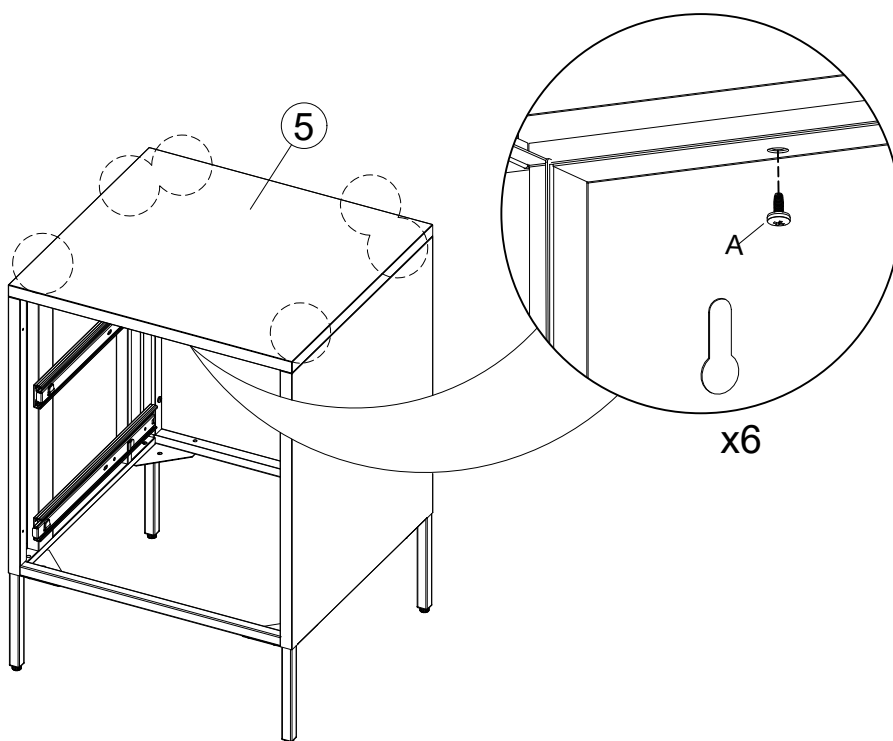


9

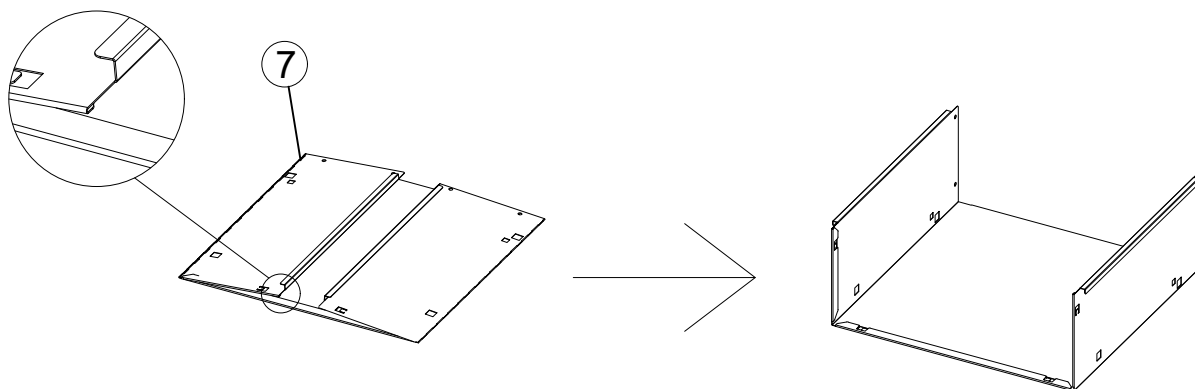


10

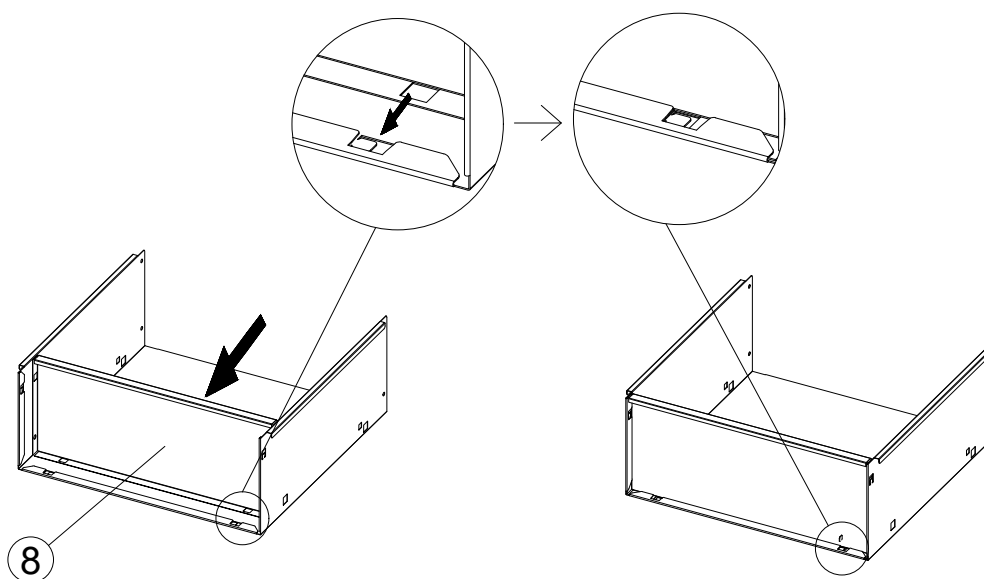

11

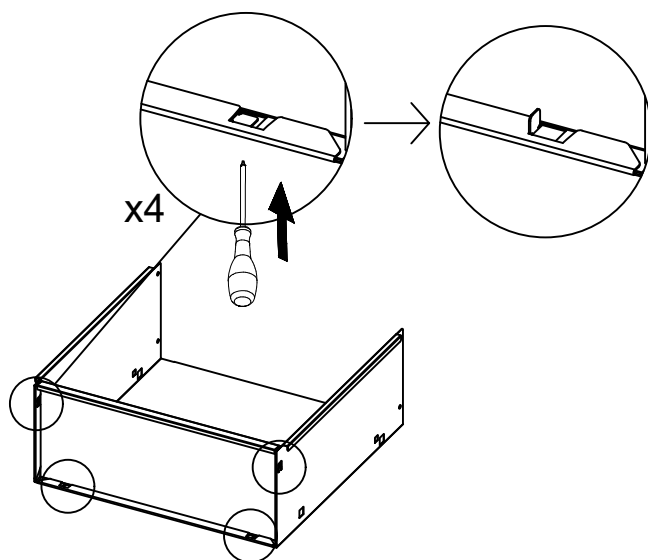

12

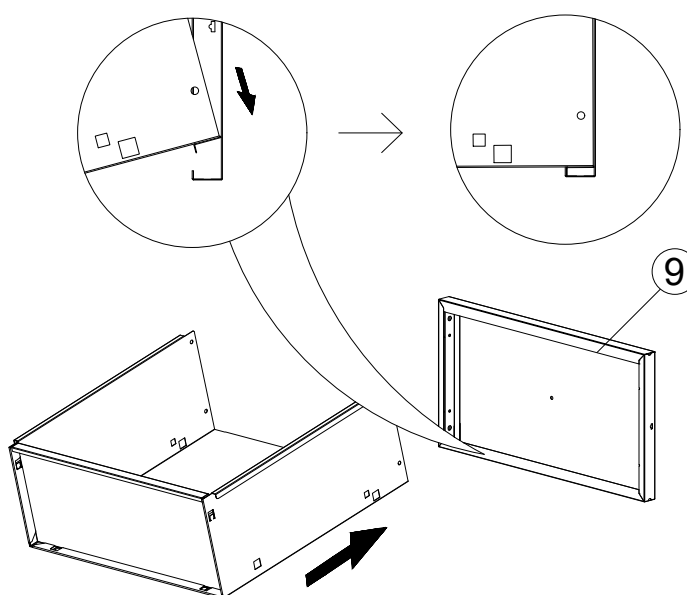


13

A x 8



M4x8mm

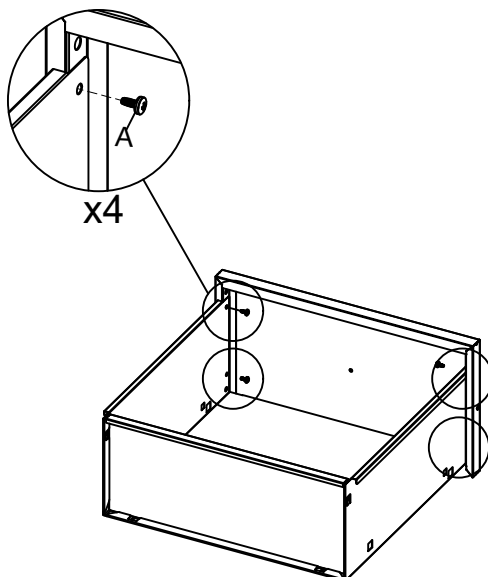

14



D x 2



E x 2




M4x5mm

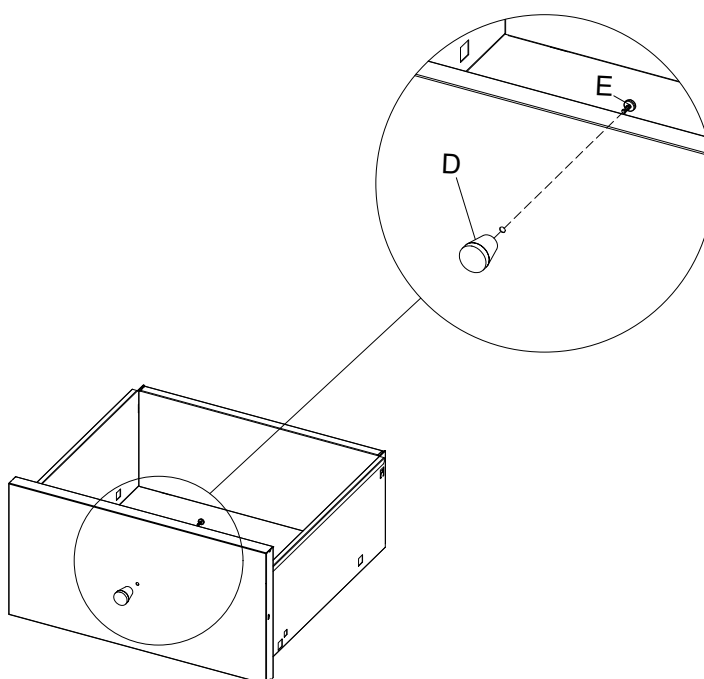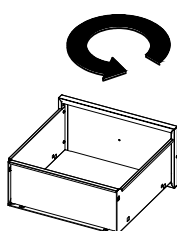


You have two drawers, please follow steps 9-12 to install the second drawer


15

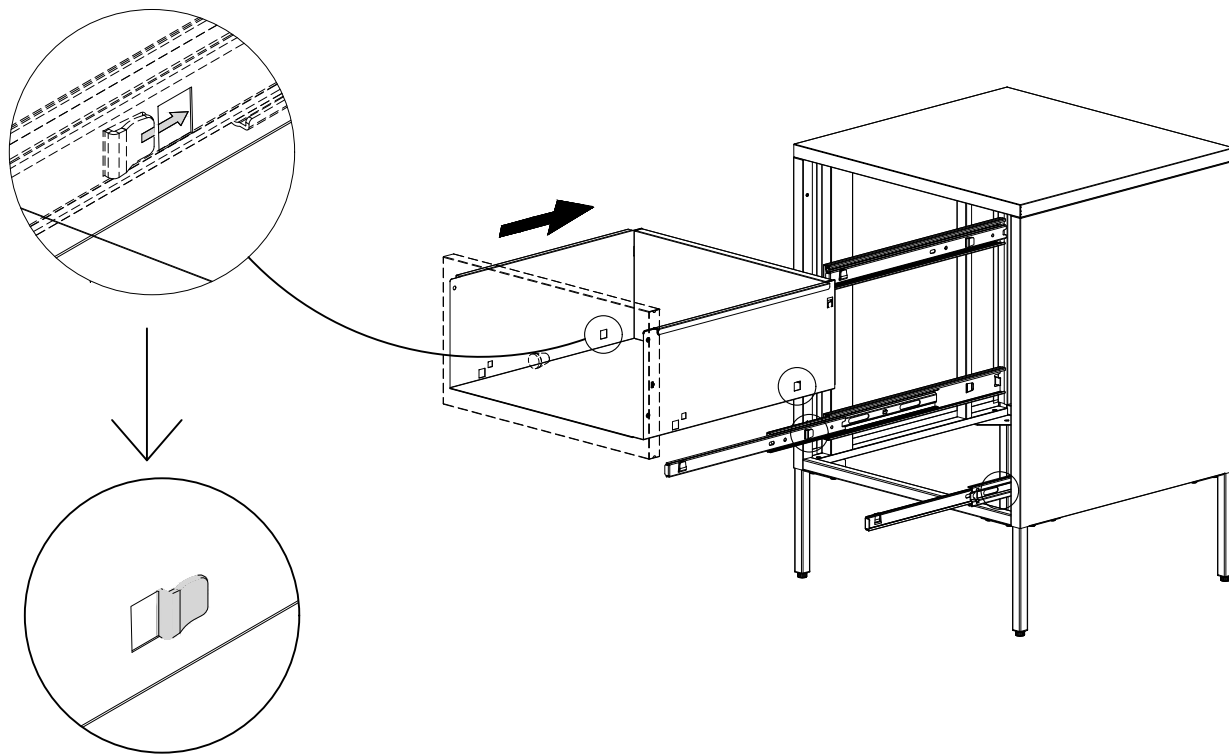






16

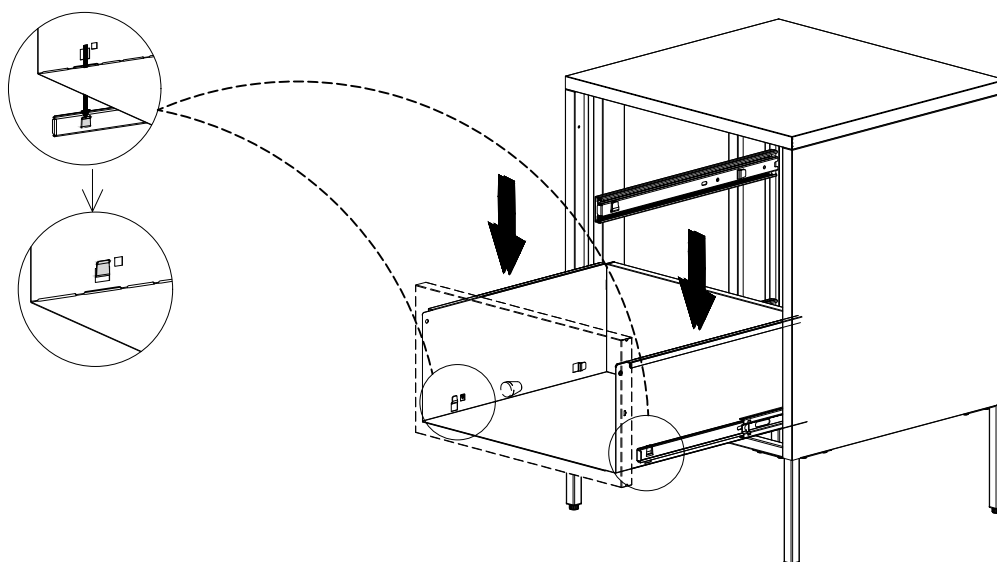


17

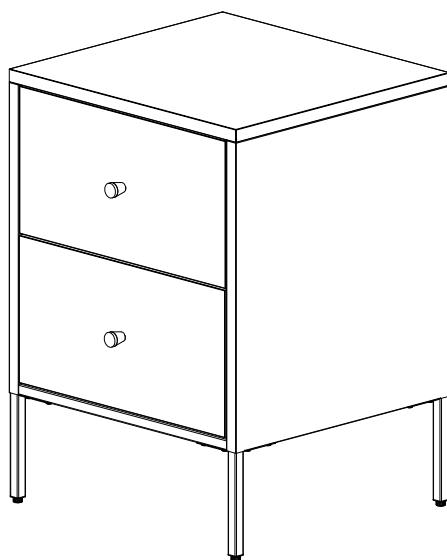

18

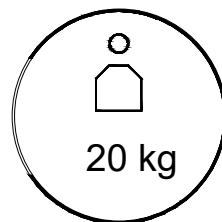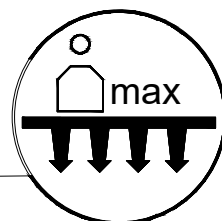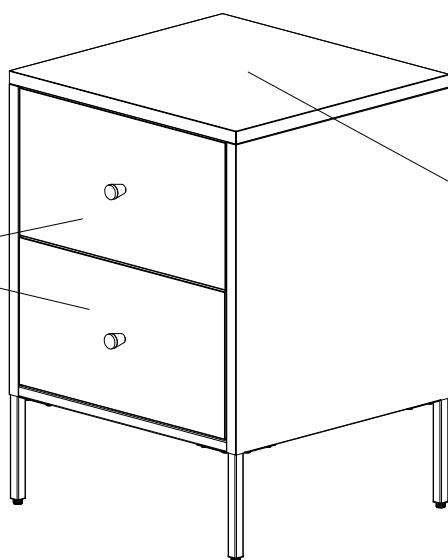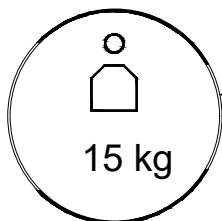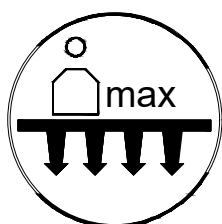

19

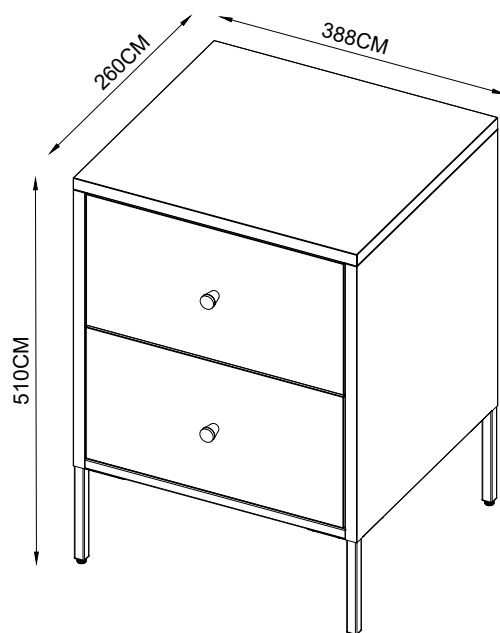

20